Rollei

- USER GUIDE
- MANUEL D'UTILISATION
- BEDIENUNGSANLEITUNG
- MANUAL DEL USUARIO
- MANUALE DELL'UTENTE

RCP-8325

8 MEGA PIXELS | ROLLEI 3x APOGON ZOOM |
2.5" COLOUR LTPS-LCD | USB 2.0 FULL SPEED | SDHC 4 GB SUPPORT

MOVIE Function | 5x Function Anti RedEye | PictBridge

Do... www.Manualslib.com

Precautions

- Before using the camera, please ensure that you read and understand the safety precautions described below. Always ensure that the camera is operated correctly.
- Do not aim the camera directly into the sun or other intense light sources which could damage your eyesight.
- Do not try to open the case of the camera or attempt to modify this camera in any way. High-voltage internal components create the risk of electric shock when exposed. Maintenance and repairs should be carried out only by authorized service providers.
- Do not fire the flash too close to the eyes of animals or people, especially for young children. Eye damage may result. In particular, remain at least one meter away from infants when using flash.
- Keep the camera away from water and other liquids. Do not use the camera with wet hands. Never use the camera in the rain or snow. Moisture creates the danger of electric shock.
- Keep the camera and its accessories out of the reach of children and animals to prevent accidents or damage to the camera.
- If you notice smoke or a strange odor coming from the camera, turn the power off immediately. Take the camera to the nearest authorized service center for repair. Never attempt to repair the camera on your own.
- Use only the recommended power accessories. Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.

■ FCC Compliance and Advisory

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.) this device may not cause harmful interference, and 2.) this device must accept any interference received, including interference that may cause unsatisfactory operation.
This equipment has been tested and found to comply with the limits for a Class B peripheral, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. When shielded interface cables have been provided with the product or when specified additional components or accessories have elsewhere been designated to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Downloaded from www.Manualslib.com manuals search engine

Contents

PRECAUTIONS I

CONTENTS II

GETTING STARTED 1

USING THIS MENU 1
UNPACKING 2
PARTS OF THE CAMERA 3
INSERTING THE BATTERIES 5
LOW BATTERY INDICATOR 5
ABOUT BATTERY TYPE 5
INSERTING THE MEMORY CARD 6
ABOUT CAMERA MEMORY 6
DCF PROTOCOL 6
SETTING THE DISPLAY LANGUAGE / DATE & TIME 7
SETTING THE DISPLAY LANGUAGE 7
SETTING THE DATE & TIME 7
USING THE LCD MONITOR 9
REC MODE 9
PLAYBACK MODE 10
CHANGING THE LCD STATUS 11

BASIC OPERATION 12

TURNING THE POWER ON AND OFF 12
POWER SAVING FUNCTION 12
CHANGING THE MODE 13
SWITCHING BETWEEN REC MODE AND PLAYBACK MODE 13
SELECTING THE REC MODE 13
USING THE MENUS 15
REC MENU 15
SETUP MENU 16

BASIC RECORDING 19

RECORDING STILL IMAGES 19
USING THE Q MODE 20
SETTING IMAGE SIZE AND QUALITY 21
USING THE ZOOM FUNCTION 22
USING THE FLASH 23
USING THE MACRO 24
USING THE SELF-TIMER & BURST 25
RECORDING MOVIE CLIPS 26
SETTING THE MOVIE SIZE 26
RECORDING AUDIO CLIPS 27
PLAYING BACK AUDIO CLIPS 27
RECORDING A VOICE MEMO 28
PLAYING BACK A VOICE MEMO 28

OTHER RECORDING FUNCTIONS 29

SETTING THE METERING 29
SETTING THE WHITE BALANCE 29
SETTING THE ISO 30
SETTING THE EXPOSURE 30
SETTING THE AEB 30
SETTING THE HIGHLIGHT 30
SETTING THE SHARPNESS 31
SETTING THE PHOTO EFFECT 31
SETTING DATE STAMP 31

PLAYBACK 32

PLAYING BACK IMAGES 32
PLAYING BACK MOVIE CLIPS 32
MAGNIFYING & TRIMMING STILL IMAGES 33
VIEWING IN THUMBNAIL 34
PLAYING A SLIDE SHOW 34
DELETING FILES 35
DELETING A SINGLE FILE 35
DELETING MULTIPLE FILES 36
DELETING ALL FILES 36
PROTECTING A SINGLE FILE 37
PROTECTING ALL FILES 37
PROTECTING MULTIPLE FILES 38
EDITING IMAGES 39

Downloaded from www.Manualslib.com manuals search engine

ROTATING STILL IMAGES 39
CHANGING THE IMAGE SIZE 39
CHANGING THE IMAGE WITH EFFECTS 40
COPYING THE FILES 41
SETTING THE DPOF 42
CHOOSING A STARTUP IMAGE 43

MAKING CONNECTIONS 44

CONNECTING THE CAMERA TO A TV 44
CONNECTING THE CAMERA TO A PC 45
USING THE CARD READER 45
CONNECTING THE CAMERA TO A COMPUTER WITH THE USB CABLE 45

APPENDIX 46

ABOUT THE FOLDER & FILE NAME 46
FOLDER STRUCTURE 46
FILE NAMING 46
TROUBLESHOOTING 47
SPECIFICATIONS 48
FUNCTION AVAILABLE LIST 49

Downloaded from www.Manualslib.com manuals search engine

Getting Started

Using This Menu

Getting Started

This section contains information you should know before using this camera.

Basic Operation

This section explains all recording features of this camera.

Basic Recording

This section explains how to record still images, movies, and audio files.

Other Recording Functions

This section explains common operations about recording images.

Playback

This section explains playback, delete, and edit functions of still images, movies and audio files.

Making Connections

This section tells you how to connect this camera to a computer or TV.

Appendix

This section describes the troubleshooting and the camera specification.

The meanings of the symbols used in this user's manual are explained below:

	This indicates cautions that should be read before using these functions.
	This indicates the useful information when using this camera.
	This indicates the reference page.

Downloaded from www.Manualslib.com manuals search engine

Unpacking

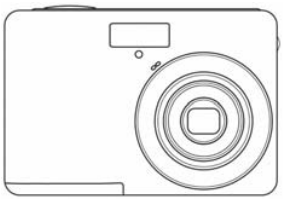

Camera



USB Cable

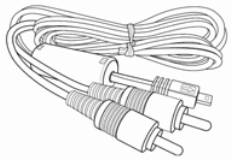

AV Cable

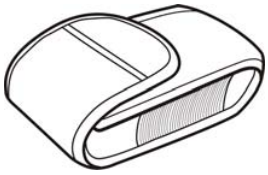

Soft Case(*)

Strap

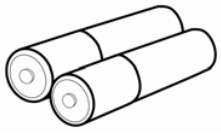

2 x AA Batteries



Software Installation CD-ROM

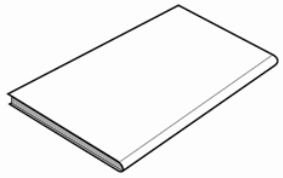

Quick Start Guide

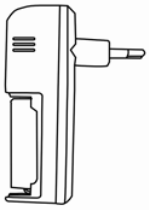

Battery Charger(*)

Caution

- Actual accessories may be different.
- Items marked with (*) are available as optional accessories.
- Note that the shape of the charger plug depends on the area where you purchased the camera.
- Do not swing the camera around by the strap.

Downloaded from www.Manualslib.com manuals search engine

Parts of the Camera

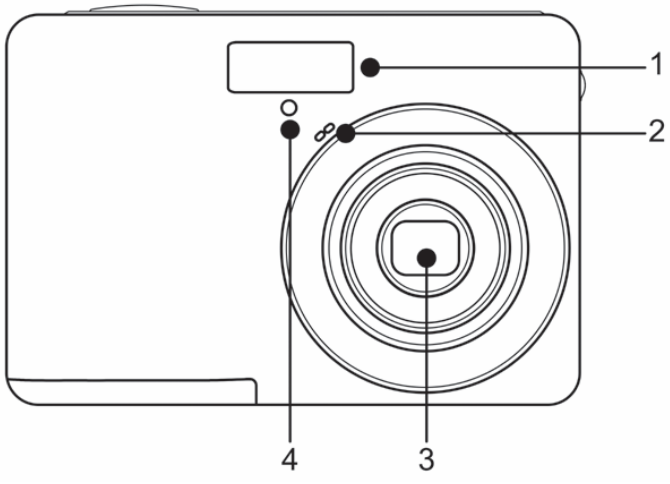

1. Flash (☞page 23)
2. Self-timer Lamp
3. Lens
4. Microphone

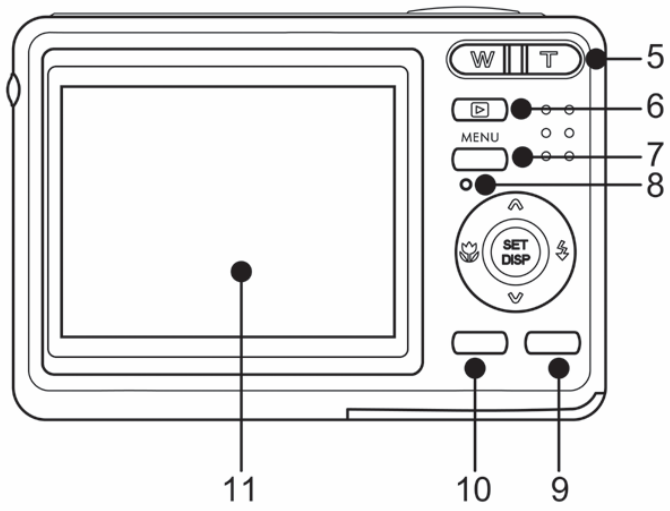

5. Zoom Button (☞page 22)
   - Thumbnail (☞page 34)
   - Playback Zoom (☞page 33)
6. Playback Button (☞page 13)
7. Menu Button (☞page 15)
8. Operation Lamp
9. Mode Button (☞page 13)
10. Delete Button (☞page 35)
11. LCD Monitor (☞page 9)
12. SET/DISP Button (☞page 11)
13. Flash Button (☞page 23)
14. Macro Button (☞page 24)

Four-way Control

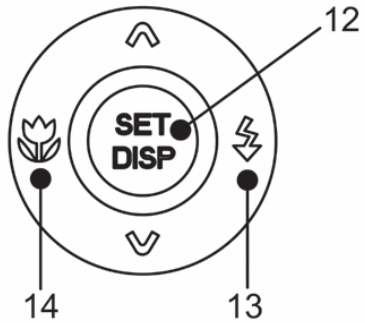

Downloaded from www.Manualslib.com manuals search engine

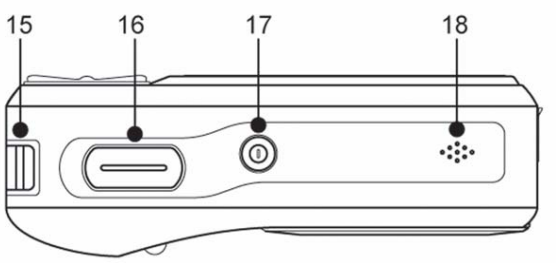

15. Strap Ring
16. Shutter Button
(☞page 19, 26)
17. Power Button (☞page 12)
18. Speaker

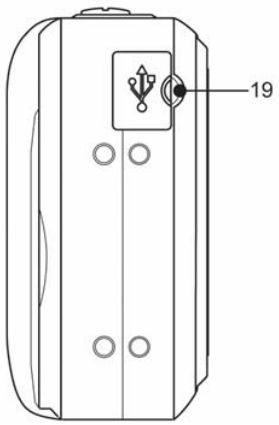

19. USB/AV Terminal
(☞page 18, 45)

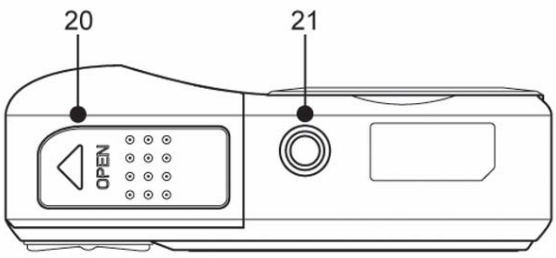

21. Battery Cover (☞page 5)
22. Tripod Socket

Downloaded from www.Manualslib.com manuals search engine

Inserting the Batteries

The camera is powered by two AA-size alkaline batteries or rechargeable Ni-MH batteries.

1 **Open the battery cover.**

- Slide the battery cover in the direction indicated by the arrow.

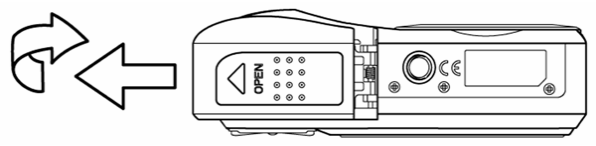

2 **Insert the batteries.**

- Insert two AA-size batteries with the positive (+) and negative (-) poles matching the directions indicated inside the battery room.

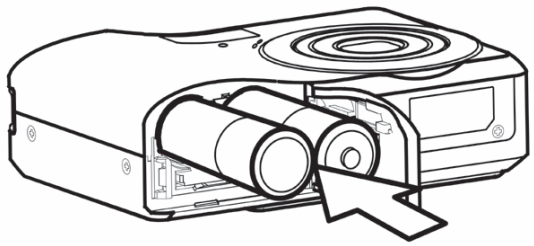

3 **Close the battery cover.**

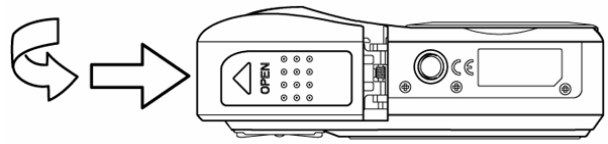

Low Battery Indicator

A low battery indicator appears on the LCD screen when the batteries are nearly exhausted. Batteries should be replaced promptly when the low battery indicator appears.

Caution

- Risk of explosion if battery is replaced by an incorrect type dispose of used batteries according to the instructions.
- Be sure to turn off the camera power before insert or remove batteries.
- Use only Alkaline or Ni-MH battery to power this camera. Use of any other type battery is not recommended.
- Replace all batteries at the same time. Never mix old and new batteries.
- Remove batteries if you will not be using them for a long time.
- The camera body may feel warm after extended use. This is normal.

About Battery Type

After replacing the batteries, please check the Battery Type in the setup menu (☞ page 18).

Downloaded from www.Manualslib.com manuals search engine

Inserting the Memory Card

You can use SD Card with this digital camera. The memory card slot is located beneath the battery cover, adjacent to the battery compartment.

1 **Open the battery cover.**

- Slide the battery cover in the direction indicated by the arrow.

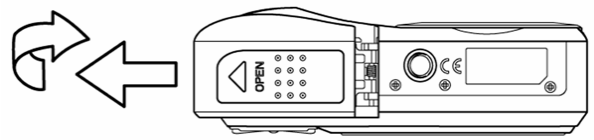

2 **Insert the card.**

- Insert the card with the label facing up and the arrow pointing in.

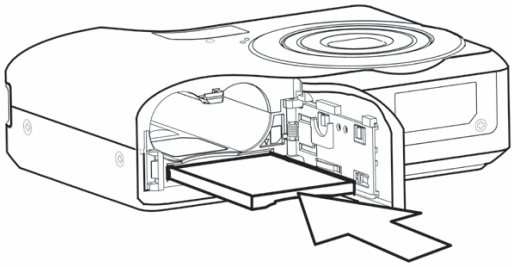

Tips

- To remove the card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

3 **Close the battery cover.**

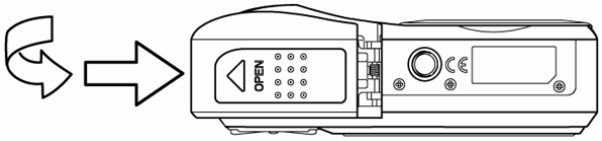

Caution

- It may cause damage to the card if removed while the camera is on.
- Do not touch the connection terminals on the back side of the card.

About Camera Memory

This camera is equipped with internal memory. If the memory card is not inserted in the camera, all images and movie clips recorded by the camera will be stored in the internal memory. If the memory card is inserted, images and movie clips are stored on the memory card.

DCF Protocol

The DCF protocol defines the format for image file data as well as the directory structure for the memory card. Images that are taken by a DCF camera can be viewed on DCF-compatible cameras from other manufacturers.

Downloaded from www.Manualslib.com manuals search engine

Setting the Display Language / Date & Time

When using the camera for the first time after purchasing, be sure to choose a language and set the date & time before using the camera.

Setting the Display Language

1 **Turn the power on, and set the camera to the Setup Menu (☞page 16).**

2 **Select [Language].**

- Press ▲ or ▼ to select **[LANGUAGE]** then press ▶ or the **SET** button to launch the submenu.

3 **Select a language.**

- Press ▲ or ▼ to select a language and press ◀ or the **SET** button to apply the setting.

4 **Press the MENU button to close the menu.**

Setting the Date & Time

1 **Turn the power on, and set the camera to the Setup Menu (☞page 16).**

2 **Select [Date & Time].**

- Press ▲ or ▼ to select **[Date & Time]** then press ▶ or the **SET** button to launch the submenu.

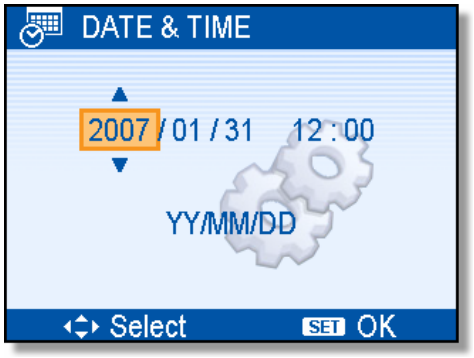

3 **Set date and time.**

- Press ▲ or ▼ to change the value of the cursor located. Press ◀ or ▶ to move the cursor between settings.

Tips

- Holding down ▲ or ▼ changes the values continuously.
- For date stamp setting (☞page 31).

Downloaded from www.Manualslib.com manuals search engine

4 **Apply the setting.**

- After adjusting the settings, press the **SET** or the **MENU** button to apply the setting.

Caution

- If the batteries are removed for longer than 48 hours, the Date and Time will need to be re-set.

Downloaded from www.Manualslib.com manuals search engine

Using the LCD Monitor

The LCD monitor is used to compose images while recording, adjust settings and replay images. The following indicators may appear on the LCD monitor while recording or playing back images.

REC mode

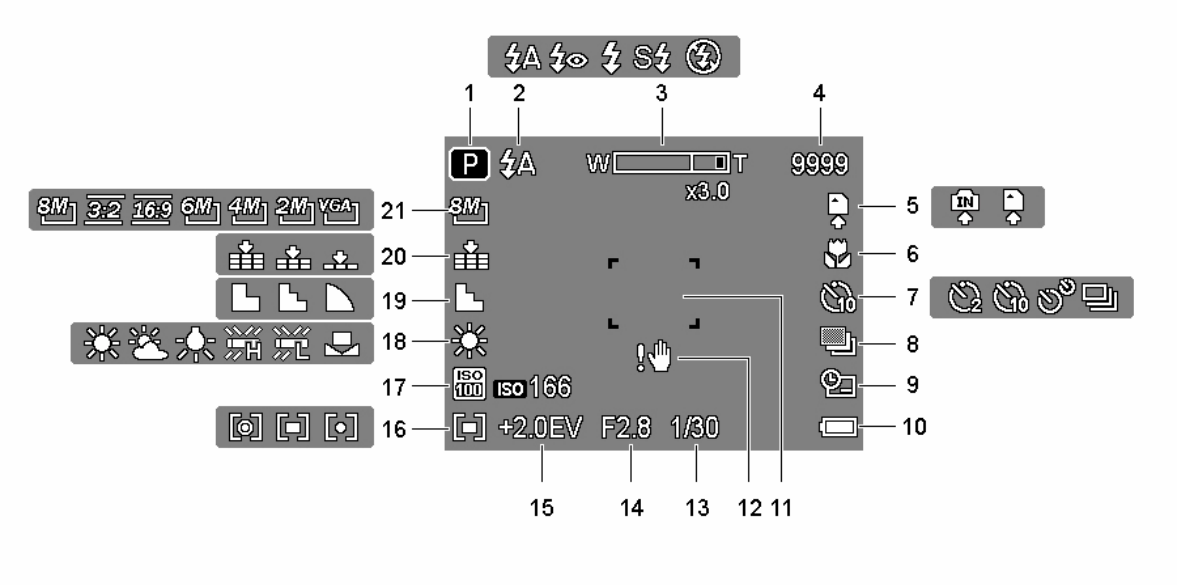

1 Recording mode (☞page 13)
2 Flash (☞page 23)
3 Zoom indicator (☞page 22)
4 Shots remaining
5 Storage media
6 Macro (☞page 24)
7 Self-timer / Burst (☞page 25)
8 AEB (☞page 30)
9 Date stamp (☞page 31)
10 Battery (☞page 5)
11 Focus area (☞page 19)
12 Shake warning (☞page 19)
13 Shutter speed (☞page 19)
14 Aperture value (☞page 19)
15 Exposure (☞page 30)
16 Metering (☞page 29)
17 ISO (☞page 30)
18 White balance (☞page 29)
19 Sharpness (☞page 31)
20 Quality (☞page 21)
21 Resolution (☞page 21)

Downloaded from www.Manualslib.com manuals search engine

PLAYBACK mode

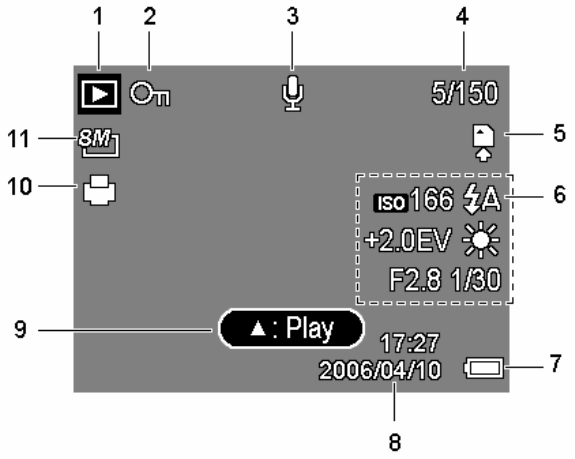

1	Playback mode (☞page 13)	**7**	Battery (☞page 5)
2	Protect (☞page 37)	**8**	Captured date & time
3	Voice memo (☞page 28)	**9**	Voice memo control (☞page 28)
4	File number / Total	**10**	DPOF (☞page 42)
5	Storage media	**11**	Resolution (☞page 21)
6	Recording info (☞page 11)		

Caution

- Some information may not display correctly if you display images captured by other camera model.

Downloaded from www.Manualslib.com manuals search engine

Changing the LCD Status

Press the **SET/DISP** button changes the LCD status as shown below:

■ **REC mode**

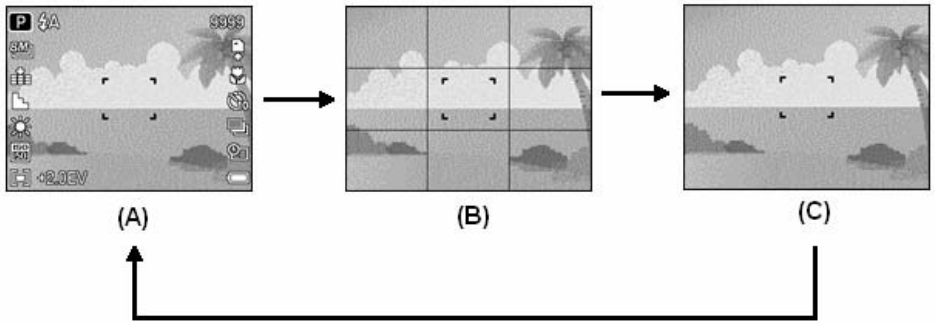

(A) OSD on
(B) Guide line
(C) OSD off

Tips

- Use the “Guide line” to compose images easily before shooting images.

■ **PLAYBACK mode**

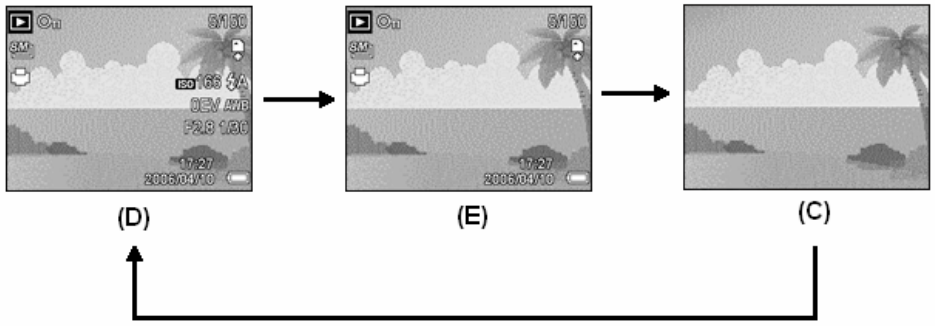

(D) Full OSD
(E) Basic OSD

Caution

- You cannot change the LCD status in the following situation:
  - Manual exposure
  - Recording movie clips or audio files
  - Playing movie clips or audio files
  - Playing the slideshow
  - Viewing in thumbnail
  - Trimming a still image
- When the LCD status is not in “OSD on”, press Macro (◀) or Flash (▶) will change the display mode to “OSD on” automatically.

Downloaded from www.Manualslib.com manuals search engine

Basic Operation

Turning the Power On and Off

1 **Press the POWER button (❶) to turn on the camera in the REC mode.**

- The power turns on, the lens extends and the LED lights in green.

Press the PLAYBACK button (❷) to turn on the camera in the PLAYBACK mode.

- The power turns on, and an image displays on the LCD monitor (❸).

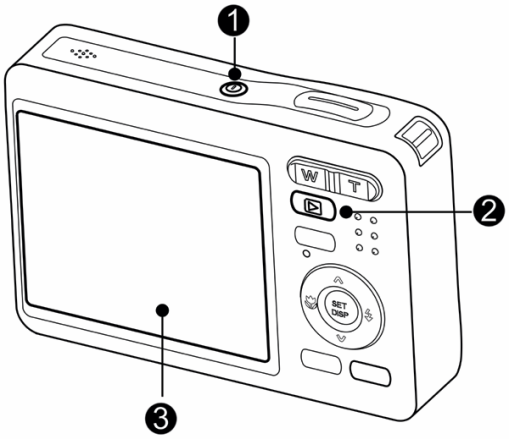

2 **Press the POWER button (❶) again to turn the power off.**

- The power turns off, the lens retracts and the LED turns off.

Tips

- You can turn on the camera without the start-up and operating sound by pressing and holding the **POWER** (❶) or the **PLAYBACK** (❷) button over 1.5 seconds.
- Switch between REC mode and PLAYBACK mode (☞page 13).

Power Saving Function

For saving the battery power, the LCD monitor automatically turns off 1 minute after the last control accessed (factory-preset setting). Press any button other than the power button to turn on the LCD monitor. You can change the power save setting in Setup menu (☞page 17).

After the power saving function has been active for 1 minute, the power will turn off completely. Press the **POWER** (❶) or the **PLAYBACK** (❷) button to restore the power.

The power save feature will not activate in the following situation:

- Recording movie clips or audio files
- Playing movie clips or audio files
- Playing the slideshow
- Connecting the camera to a computer or printer with the USB cable

Downloaded from www.Manualslib.com manuals search engine

Changing the Mode

You can record images and voices in the REC mode. And using the PLAYBACK mode to replay, delete, or edit images on the LCD monitor.

Switching between REC mode and PLAYBACK mode

In REC mode, press the **PLAYBACK** button (❶) to switch to the PLAY mode.

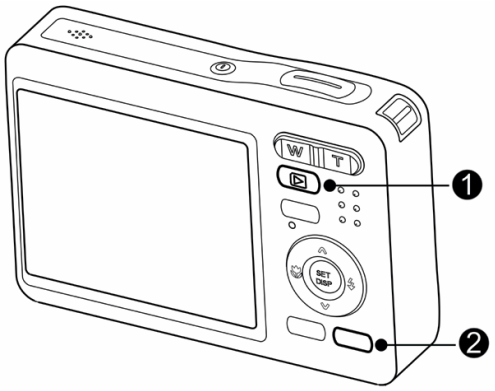

In PLAY mode, press the **PLAYBACK** (❶) or the **MODE** (❷) button to switch to the REC mode.

Selecting the REC mode

1 **Set the camera to the REC mode (☞page 13).**

2 **Launch the mode palette.**

- Press the **MODE** button (❷) to show the scene mode palette.

3 **Select a mode.**

- Use the four-way control to select a desired mode and press the **SET** button to confirm the setting.

Display	Title	Description
P	Program	The camera makes settings suitable for the shooting conditions.
	Movie	For recording movie clips.
	Voice REC	For recording audio.
	Sunset	Enhance the red hue for recording sunset images.
	Backlight	Shooting the image of backlight object by changing metering.

Downloaded from www.Manualslib.com manuals search engine

Display	Title	Description
	Q Mode	Allows beginners to take pictures easily.
	Landscape	Used for the wide scenic views.
	Portrait	Blurring the background to focus on the subject.
	Snow	Used for the beach or snow scenes.
	Fireworks	Slow shutter speed to take fireworks exploding.
	Night Scene	Shooting the subject while keeping the background night scenery.
	Kids	Take a still image to capture moving kids.
	Food	Higher saturation makes food more appetizing.
	Building	Enhance the edges of the subject.
	Text	Enhance the black & white contrast.

Downloaded from www.Manualslib.com manuals search engine

Using the Menus

When a menu is displayed, the four-way control and the **SET** button are used to make the desired settings.

REC menu

1 **Turn the power on, and set the camera to the REC mode (☞page 13).**

2 **Open the REC menu.**

- Press the **MENU** button (❶) to display the menu.

3 **Select an item.**

- Press ◀ or ▶ (❷) to select a menu item.

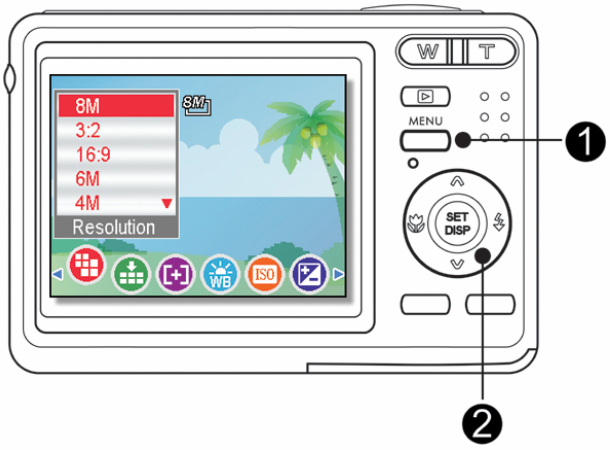

4 **Change the setting.**

- Press ▲ or ▼ (❷) to change the setting.

5 **Press the MENU (❶) or the SET (❷) button to save the settings and close the menu.**

REC menu list (Still Image)

Menu Item	Available Setting	Page
Resolution	8M / 3:2 / 16:9 / 6M / 4M / 2M / VGA	21
Quality	/ /	21
Metering	/ /	29
White Balance	Auto / / / / / /	29
ISO	Auto / ISO 50 / ISO 100 / ISO 200 / ISO 400	30
Exposure	-2.0EV ... +2.0EV	30
Drive Mode	Off / / / /	25
AEB	Off /	30
Highlight	Off / / /	30
Sharpness	/ /	31

Downloaded from www.Manualslib.com manuals search engine

Effect	Off / B&W / Sepia / Negative / Red / Green / Blue	31
Date Stamp	Off / Date / Date & Time	31
Digital Zoom	Off / On	22

REC menu list (Movie)

Menu Item	Available Setting	Page
Movie Size	16:9 / 640 / 320	26
Metering	[◉] / [■] / [•]	29
White Balance	Auto / ☀ / ⛅ / ☀ / H / L / 🏠	29

Setup menu

1 **Turn the power on, and set the camera to the REC or PLAYBACK mode (☞page 13).**

2 **Press the MENU button (❶) to open the REC or PLAYBACK menu.**

- The menu displays depends on whether you are in the REC mode or the PLAY- BACK mode.

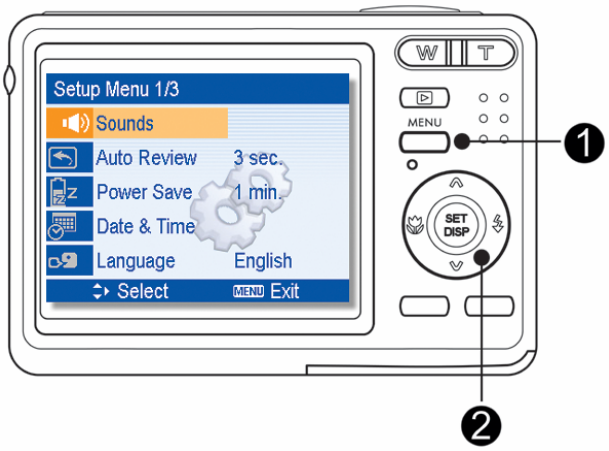

3 **Open the Setup menu.**

- Press four-way control (❷) to select **SETUP** (🔧) and then press the **SET** (❷) button to display the Setup menu.

4 **Select an item.**

- Press ▲ or ▼(❷) to select a menu item and then press ▶ or the **SET** (❷) button to launch the submenu.

5 **Change the setting.**

- Press ▲ or ▼ (❷) to select an option and press ◀ or the **SET** (❷) button to apply the setting.

Downloaded from www.Manualslib.com manuals search engine

6 **Press the MENU (❶) button to close the menu.**

Setup menu list

Menu Item	Functions
Sounds	**[Shutter]**: Sets the shutter sound on and off. **[Start-up]**: Sets a type of the start-up sound. **[Beep]**: Sets the operation sound on and off. **[Volume]**: Adjusts the volume of the shutter sound, start-up sound, beep and playback sound.
Auto Review	**[Off]**: The captured image will not automatically display after shooing. **[3 sec.]**: The captured image will display for 3 seconds after shooting. **[5 sec.]**: The captured image will display for 5 seconds after shooting.
Power Save	**[1 min.] / [3 min.] / [5 min.]**: For power consumption, the camera is turned off automatically for a period of time. • The power save feature will not activate in some situation (☞page 12).
Date & Time	Sets the date & time (☞page 7).
Language	Select a language for display menus and other information from the following 21 languages: (☞page 7) **[English]**: English **[Deutsch]**: German **[Italiano]**: Italian **[Nederlands]**: Dutch **[Magyar]**: Hungarian **[Türk]**: Turkish **[Svenska]**: Swedish **[Rumänisch]**:Romanian **[عربي]**: Arabic **[ไทย]**:Thai **[한국어]**: Korean **[繁體中文]**: T. Chinese **[Español]**: Spanish **[Français]**: French **[Português]**: Portuguese **[Čestina]**: Czech **[Polski]**: Polish **[Русский]**: Russian **[Ελληνικά]**: Greek **[日本語]**: Japanese **[简体中文]**: S. Chinese
File No.	Use this function if the camera experiences a “Folder cannot be created” error or if you want to restart numbering, for example, after erasing all files. **[Series]**: Store the latest used file number no matter deleting files or inserting a new memory card.

Downloaded from www.Manualslib.com manuals search engine

Menu Item	Functions
	[Reset]: Reset file numbering each time the memory card is changed.
	• Resetting the file number is useful for avoiding the file name duplication when images are downloaded to a computer (☞page 46).
TV Out	You can review images on a television with a supplied AV cable (☞page 44). TV Out should be set to either NTSC or PAL depending on your region. **[NTSC]**: America, Japan and others **[PAL]**: Europe, Oceania and others
USB	**[Computer]** / **[Printer]**: Sets the USB mode to connect the camera with a printer or computer (☞page 45).
S.Image	Sets a recorded image as the start-up image (☞page 43).
Format	To erase all data stored in the memory card if you are using a card, or all data stored in the internal memory if there is no card inserted. • A “BUSY...PLEASE WAIT” message displays and the memory card is starting format. • A “COMPLETED” message displays when finish formatting. • All data will be deleted including protected files. Be sure to download important files to your computer before formatting.
Battery Type	To ensure the camera displays battery level correctly, set the type to match the batteries used. **[Alkaline]**: When use alkaline batteries. **[NiMH]**: When use NiMH batteries.
Reset All	Resets the entire menu and button operation settings to initial default. The following settings do not change after Reset All: • Date & Time setting • Language setting • TV out setting • Battery Type

Downloaded from www.Manualslib.com manuals search engine

Basic Recording

Recording Still Images

1 **Turn the power on, and set the camera to the REC mode (☞page 13).**

2 **Compose the subject on the monitor.**

- Aim the focus area (❶) to the subject that you want to take.

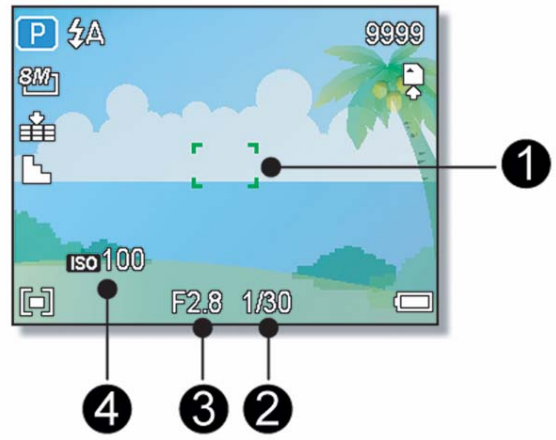

3 **Half press the shutter button to focus the image.**

- The focus area (❶) becomes green while in focus, then shutter speed (❷), aperture value (❸) and ISO value (❹) are displayed.
- If the shutter speed is slow or the possibility that image may be blurred, the shake warning icon may appear on the LCD monitor. To avoid this, use a tripod to stabilize the camera when recording images.

4 **Take a picture.**

- Press the shutter button fully to take a picture.

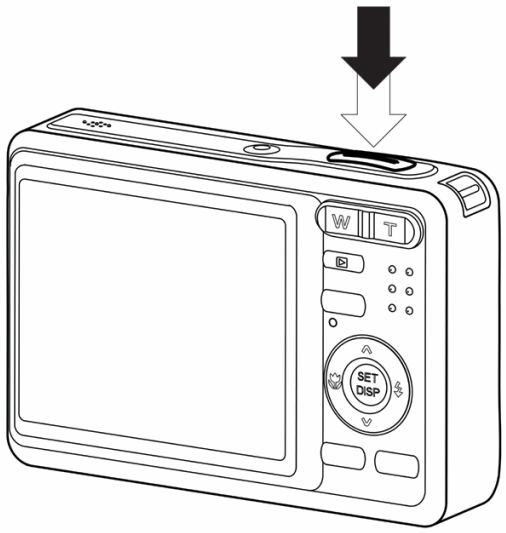

Caution

- Make sure that your fingers or the wrist strap does not block the lens.

Downloaded from www.Manualslib.com manuals search engine

Using the Q mode

The Q mode provides a simplified camera interface. Larger icons and fewer controls make it easier to take pictures anytime, especially for the beginners and elder users.

You can use only the basic settings in the Q mode:

Button	**Flash**: Auto / Red eye / Force on / Slow sync / Force off
	Macro: Off / On
	SET/DISP: OSD on / Guide line / OSD off
Menu	**Resolution**: 8M / 3:2 / 16:9 / 6M / 4M / 2M / VGA
	Drive Mode: Off / 2 sec. / 10 sec. / Double / Burst
	Beep: Off / On
	Auto Review: Off / 3 sec. / 5 sec.

Rest of settings will not be controlled as below:

Fixed setting (*)	• Quality: S.Fine • Metering: Multi • White balance: Auto • ISO: Auto • Exposure: Auto • AEB: Off	• Highlight: Off • Sharpness: Normal • Effect: Off • Date Stamp: Date & Time • Digital Zoom: Off
Utility setting (**)	• Shutter sound • Start-up sound • Power save • Date & Time • Language	• File No. • TV out • USB • Start-up image

(*)Fixed setting: Settings are fixed in Q mode.

(**)Utility setting: Use the same setting as last mode used.

Downloaded from www.Manualslib.com manuals search engine

Setting Image Size and Quality

You can select lower image resolution and quality to decrease the image size to capture more images. Choose a suitable setting according to the desired image quality and purpose. For details, see page 15.

Resolution Values

Image Size		Print Size	
8M	3264 x 2448	Printing larger than A4-size.	Larger
3:2	3264 x 2176		
16:9	3264 x 1840		
6M	2816 x 2112		
4M	2272 x 1704		
2M	1600 x 1200		
VGA	640x480	Printing to postcards or attaching to e-mail.	Smaller

Quality Values

Compression		Purpose	
	Super Fine	Shoot higher quality images.	Higher Quality
	Fine	Shoot normal quality images.	
	Normal	Shoot for more images.	Lower Quality

Downloaded from www.Manualslib.com manuals search engine

Using the Zoom Function

Your camera has a combination of optical and digital zoom functions that allows you to zoom in on far away subjects or zoom out for a wide angle shot.

The optical zoom is achieved by mechanically adjusting the lens of the camera. The digital zoom enlarges or shrinks the image using a software process.

1 **Select the zoom setting, and point the camera at the subject.**

2 **Press the zoom button (❶) to compose the image.**

[W]: zoom out for a wide-angle shot.

[T]: zoom in for a telephoto shot.

- When the zoom button is pressed, the zoom bar appears on the LCD monitor.
- When the optical zoom (❷) factor is at maximum, zooming stops temporarily. Press the **[T]** again, the camera switches to the digital zoom (❸) automatically and zooming continues.
- The digital zoom (❸) will not activate in movie recording.

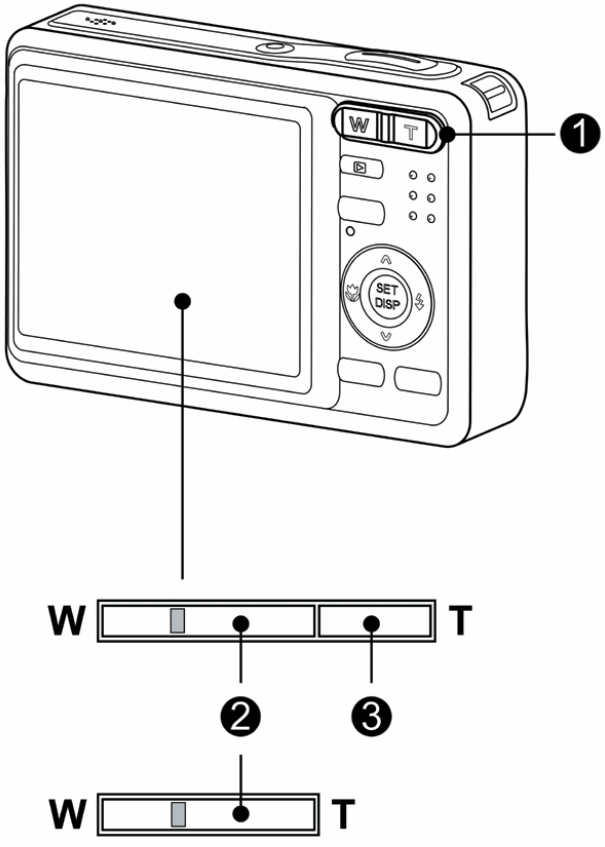

3 **Press shutter button to take a picture.**

Tips

- Digital zoom works by enlarging the center portion of an image through a software interpolation process.
- The digital zoom is used to achieve magnification levels up to approx. 4 times.

Downloaded from www.Manualslib.com manuals search engine

Using the Flash

The flash is not only for taking pictures when there is insufficient light, but also when the subject is in shade or in backlight conditions. Press the flash button to cycle your camera through the various flash modes. The flash will not activate when continuous shooting or movie recording.

1 **Turn the power on, and set the camera to the REC mode (☞page 13).**

2 **Press the flash button (❶) to change the flash mode.**

- Each time the flash button is pressed, the flash icon (❷) changes.

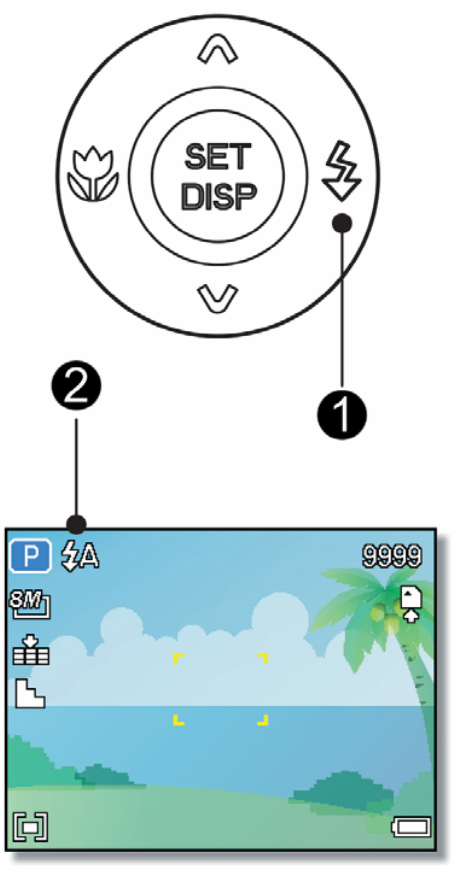

Auto flash:

Flash fires automatically when shooting conditions require extra lighting.

Red-eye reduction:

Flash strobes to let the subject's eyes adjust to the flash, then fires again to take the actual image. Your camera will detect the subject brightness and use the flash only when required.

Force on:

Flash fires every time you take a photo, regardless of lighting conditions.

Slow sync:

Flash fires with a slow shutter speed.

Force off:

The flash never fires even in dark situation.

3 **Press shutter button to take a picture.**

Caution

- The flash charging time may increase when the battery is low.
- The available flash settings are limited depending on the REC mode you selected (☞page 49).

Downloaded from www.Manualslib.com manuals search engine

Using the Macro

Your camera is equipped with a macro function that allows you to focus on very close subjects. In macro mode you can focus on subjects 15 cm from the lens when in the maximum wide angle setting and 40 cm in the maximum telephoto setting.

1 **Turn the power on, and set the camera to the REC mode (☞page 13).**

2 **Press the macro button (❶) enters the macro mode.**

- The macro icon (❷) displays in the LCD monitor.
- To leave the macro mode, press the macro button (❶) again.

3 **Press shutter button to take a picture.**

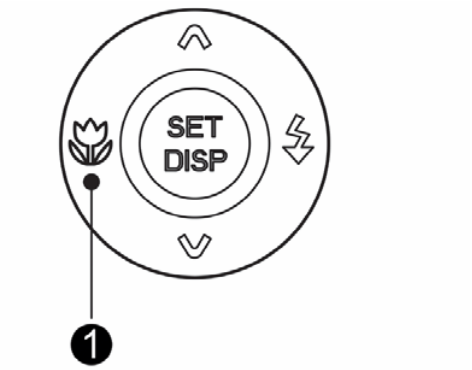

Tips

- Distances referred to measure the distance between the camera lens surface and the subject.

Downloaded from www.Manualslib.com manuals search engine

Using the Self-timer & Burst

Use the self-timer to set a delay from the time the shutter button is pressed to the time the image is shot. Use the burst to record continuous still images shooting.

1 **Turn the power on, and set the camera to the REC mode (☞page 13).**

2 **Open the REC menu (☞page 15).**

- Use ◀ or ▶ to select **[Drive mode]** from the REC menu.

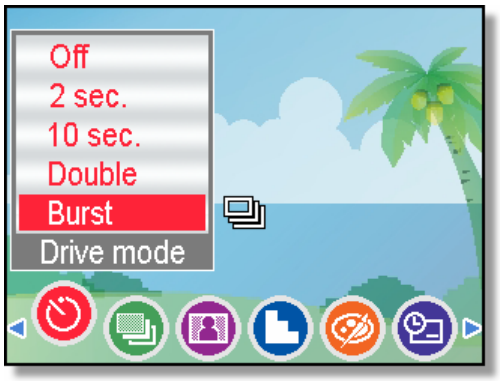

3 **Change the setting.**

- Press ▲ or ▼ to select a drive mode, then press the **SET** button.

Off:
Record a single image.

2 sec.:
The shutter release will be delay for 2 seconds.

10 sec.:
The shutter release will be delay for 10 seconds.

Double:
Record two images in a shot after pressing the shutter release button 10 and 12 seconds.

Burst:
Keep pressing the shutter button fully to take continuous shooting. Release the shutter button to stop shooting.

4 **Press shutter button to take a picture.**

Tips

- When using the self-timer function, be sure to use a tripod or place the digital camera on a level, stable surface.

Downloaded from www.Manualslib.com manuals search engine

Recording Movie Clips

1 **Turn the power on, and set the camera to the Movie mode (☞page 13).**

2 **Compose the subject on the monitor.**

- Aim the focus area (❹) to the subject that you want to take.
- The LCD monitor displays the available recording time (❸).

3 **Start recording.**

- Press the shutter button (❶) to start recording.
- Using the zoom button (❷) to adjust the image size.
- The White Balance is set and locked to the settings of the first frame

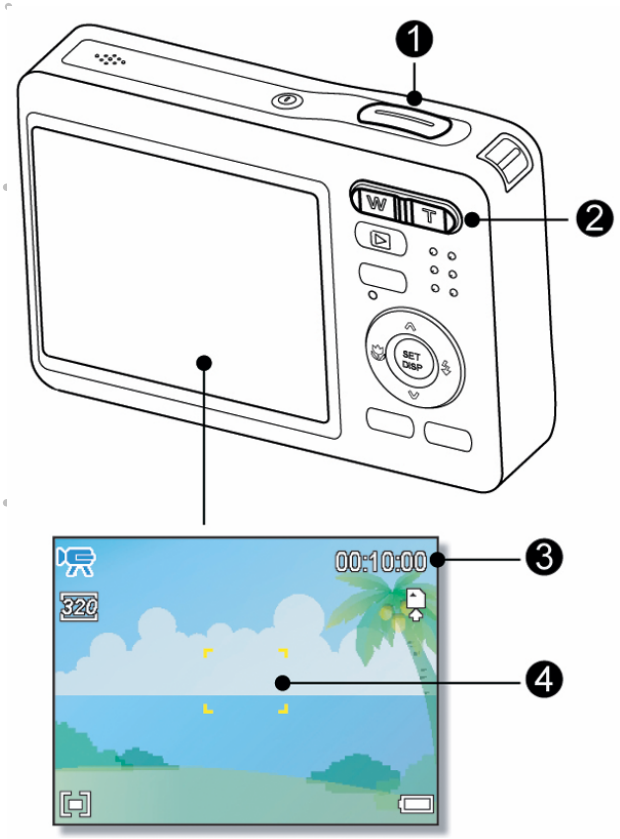

Caution

- Sound cannot be recorded while pressing the zoom button..
- The digital zoom cannot be used in Movie mode.

4 **Finish recording.**

- Press the shutter again to end recording.
- The camera will stop recording automatically when the memory capacity has been reached.

Setting the Movie Size

Movie Size and Frame Rate

Resolution		Frame Rate	
16:9	720 x 400	30 frames/sec.	Higher Quality ↕ Lower Quality
640	640 x 480		
320	320 x 240		

Downloaded from www.Manualslib.com manuals search engine

Recording Audio Clips

1 **Turn the power on, and set the camera to the Voice REC mode (☞page 13).**

2 **Press the shutter button (❶) to start recording.**

- The voices are recorded from the microphone (❷) of the camera. Be careful to avoid touching the microphone while recording.

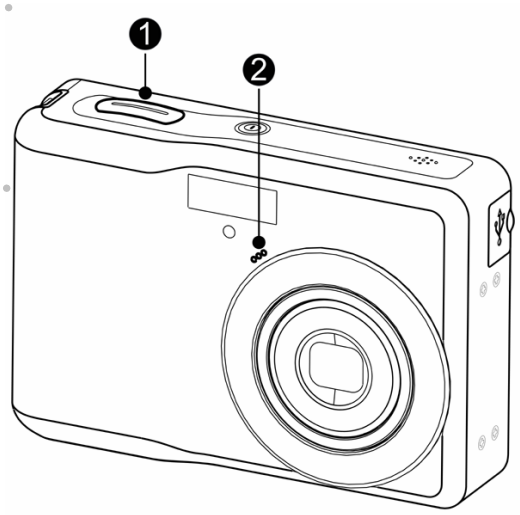

3 **Press the shutter button again to end recording.**

- The camera will stop recording automatically when the memory capacity has been reached.

Playing Back Audio Clips

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press ◀ or ▶ to select the audio clip that you want to playback.**

3 **Start playing back.**

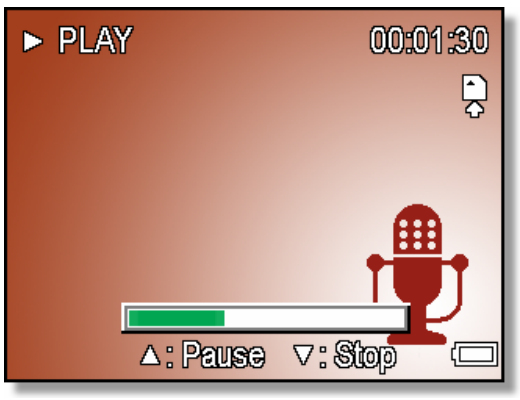

- Press ▲ to start playing the audio clip.
- Press ▼ to stop the audio clip, or press ▲ to pause it. When audio clip paused, press ▲ again to resume.

Downloaded from www.Manualslib.com manuals search engine

Recording a Voice Memo

You can add a voice memo to the still images after you record it.

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press ◀ or ▶ to select a still image that you want to add a voice memo.**

- If the image already has the voice memo recorded, the 🎙 appears on the LCD monitor. The new recording will replace the previous one.

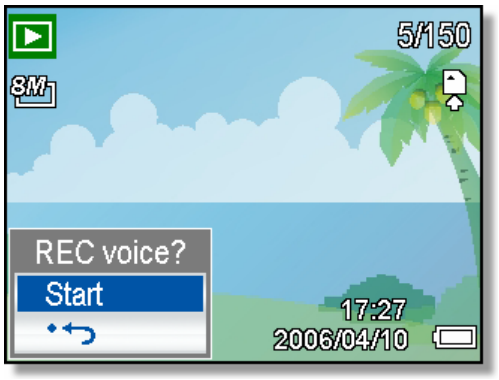

3 **Open the PLAYBACK menu.**

- Press the **MENU** button, using four-way control to select **Voice Memo** (🎙) and press the **SET** button.

4 **Press the SET button to start recording for 30 seconds.**

- Press the **SET** button again to end recording.

Caution

- The voice memo cannot be added to a movie clip or a protected image.
- You cannot delete only the voice memo. When you delete the image, the attached voice memo is also deleted.

Playing Back a Voice Memo

1 **Turn the power on, and set the camera to the PLAY mode (☞page 13).**

2 **Press ◀ or ▶ to select the image that has the voice memo recorded.**

3 **Start playing back.**

- Press ▲ to start playing the voice memo.
- Press ▼ to stop the voice memo, or press ▲ to pause it. When voice memo paused, press ▲ again to resume.

Downloaded from www.Manualslib.com manuals search engine

Other Recording Functions

Setting the Metering

There are 3 different light metering options available on your camera.

Option	Description
	Light is measured from the entire shooting screen, but gives more importance to the values near the center.
	Selects an exposure based on readings from multiple points in the subject area.
	Selects an exposure based on a single reading taken from the center of your picture.

Setting the White Balance

Adjust the white balance to match different light sources such as sunlight, incandescent (tungsten) lighting or, fluorescent lighting.

Option	Description
AUTO	Automatically corrects white balance. Ideal for general photography.
	Adjusts for bright sun conditions, or natural light conditions.
	Adjusts for cloudy days or twilight conditions.
	Adjusts for normal indoor lighting conditions. Corrects the orange hue of household light bulbs. Ideal for indoor photos under tungsten or halogen lighting without a flash.
	Adjusts for fluorescent lighting. Corrects the green hue of fluorescent lighting. Ideal for indoor photos under fluorescent lighting without a flash.
	For more accurate adjustment or when the light source cannot be specified.

Tips

- Point the camera at a white piece of paper or similar object under the lighting conditions for which you want to set the white balance, and then press the Shutter button.

Downloaded from www.Manualslib.com manuals search engine

Setting the ISO

With the initial settings, the ISO sensitivity is automatically set according to the brightness of the subject.

Option	Description
Auto	Sets the ISO sensitivity automatically.
ISO 50	Sets the sensitivity to ISO 50 equivalent.
ISO 100	Sets the sensitivity to ISO 100 equivalent.
ISO 200	Sets the sensitivity to ISO 200 equivalent.
ISO 400	Sets the sensitivity to ISO 400 equivalent.

Tips

- Higher ISO speeds increase the image noise. To take clean images, use as low an ISO speed as possible.

Setting the Exposure

Set the exposure value manually to compensate for unusual lighting conditions such as indirect indoor lighting, dark backgrounds, and strong backlighting.

Setting the AEB

Sets the auto exposure bracketing (AEB) to shoot 3 continuous images, each with a different exposure setting: correctly exposed, underexposed, and overexposed.

Setting the Highlight

Make the subject stand out from its surroundings. The subject will be in focus in three different ranges: / /

Downloaded from www.Manualslib.com manuals search engine

Setting the Sharpness

You can select whether you want the image to have sharp or soft outlines.

Option	Description
	The edges of the image are emphasized. The edges will become sharp, but noise may occur in the recording image.
	The edges of the image are sharp. This is suitable for printing.
	The edges of the image are softened. This is suitable for editing images on PC.

Setting the Photo Effect

You can add special effects to your images in Record mode or in Playback mode.

Option	Description
Off	No effect is added to the image.
B&W	Convert image to black & white.
Sepia	Recorded image will be stored in a sepia tone.
Negative	Opposite what they were in the original image.
Mosaic	Add mosaic tiles to the images. (Playback only)
Red	The image becomes reddish.
Green	The image becomes greenish.
Blue	The image becomes bluish.

Setting Date Stamp

The Date Stamp function can be used to add a date to your pictures as you take them.

Option	Description
Off	Do not add the recorded date & time to printed images.
Date	Only add the recorded date to printed images.
Date & Time	Add the recorded date & time to printed images.

Downloaded from www.Manualslib.com manuals search engine

Playback

Playing Back Images

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

- The latest recorded image appears on the LCD monitor.
- If there are no images stored, a message **[No image]** appears.

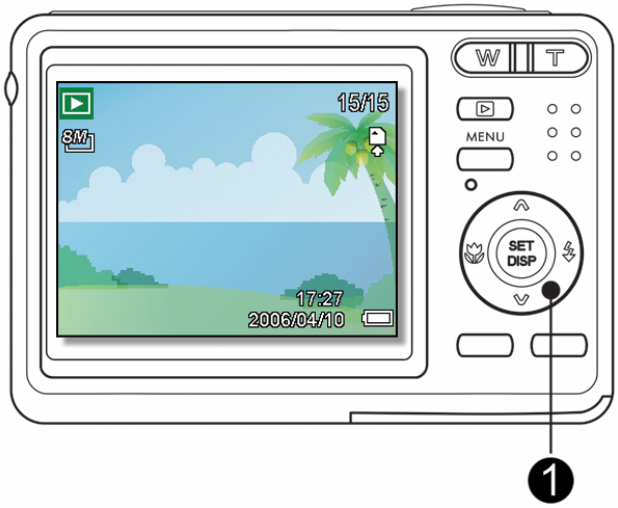

2 **Press the four-way control ◀ or ▶ (❶).**

- ◀: displays the previous image.
- ▶: displays the next image.

Tips

- Holding down ◀ or ▶ scrolls images in a high speed.

Playing Back Movie Clips

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press ◀ or ▶ to select a movie clip that you want to playback.**

3 **Start playing back.**

- Press ▲ to start playing the movie clip.
- Press ▼ to stop the movie clip, or press ▲ to pause it. When the movie paused, press ▲ again to resume.

Tips

- During movie playing back, press ▶ to fast forward or press ◀ to rewind it.
- Press the shutter to capture the still image from the movie clip while it had paused.

Downloaded from www.Manualslib.com manuals search engine

Magnifying & Trimming Still Images

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Select an image.**

- Press ◀ or ▶ (❸) to select the image that you want to magnify or trimming.
- Only still images can be magnified and trimmed.

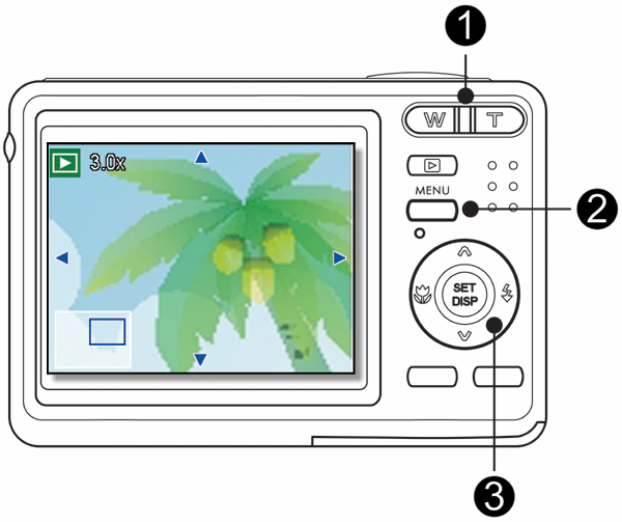

3 **Magnify the image.**

- Press **[T]** (❶) to magnify the image, and the central portion of the image is displayed. You can use the arrow button (❸) to view different parts of the magnified image.
- Press the **MENU** button (❷) to return to the normal size.

4 **Trim the image.**

- Press the **SET** button (❸) to set the image trimming.

5 **Save the image.**

- Press the **SET** button (❸) again to trim the selected image and save it as a new one.

Downloaded from www.Manualslib.com manuals search engine

Viewing in Thumbnail

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press the zoom button [W], a thumbnail screen is displayed.**

3 **Use the four-way control to select the desired image, and press [T] or the SET button to show the selected image in full screen.**

Tips

- You can protect or delete multiple images in thumbnail, see page 36, 38.

Playing a Slide Show

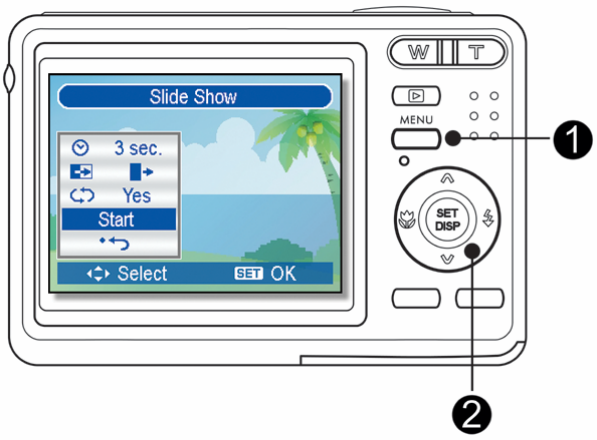

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Enter the slide show.**

- Press the **MENU** button (❶), use the four-way control (❷) to select **Slide Show** ( ) and press the **SET** button (❷).

3 **Change the slide show settings.**

- Use the four-way control (❷) to set the slideshow interval ( ), effect ( ) and repeat ( ).
- You can set the interval between 1~10 seconds.

4 **Playing the slide show.**

- Press the **SET** button (❷) to start the slideshow.
- During the slideshow, press the **SET** button (❷) to pause the slideshow and press the **SET** button again to resume.

Downloaded from www.Manualslib.com manuals search engine

Deleting Files

Deleting a Single File

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Open the menu.**

- Press the **MENU** button (❶), then use the four-way control (❷) to select **Delete** (🗑) and press the **SET** button (❷).

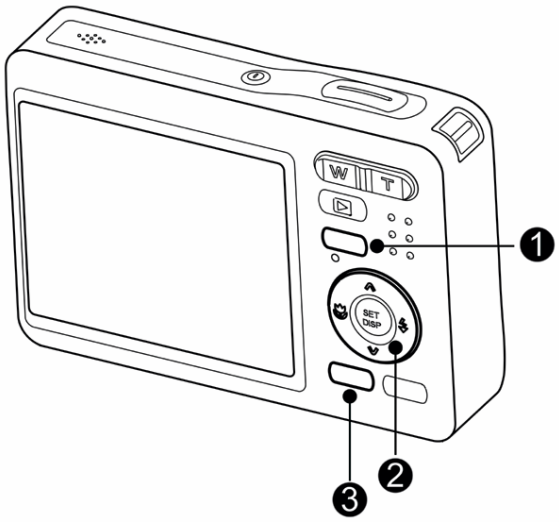

3 **Press ▲ or ▼(❷) to select [SINGLE], and then press the SET button (❷).**

4 **Press ◀ or ▶ (❷) to select the image you want to delete.**

5 **Press the SET button (❷) to delete the image.**

- Repeat step 4~5 to delete images.

Tips

- To quickly delete the current display image
  1. Select the image you want to delete.
  2. Press the **Delete** button (❸) to show a confirmation.
  3. Press the **SET** button (❷) to delete the current display image.
- Protected images cannot be deleted with this function.

Downloaded from www.Manualslib.com manuals search engine

Deleting Multiple Files

1 **Turn the power on, and set the camera to the thumbnail screen (☞page 34).**

2 **Open the menu.**

- Press the **MENU** button, then Press ◀ or ▶ to select to select **Delete** (🗑) and press the **SET** button.

3 **Press ▲ or ▼ to select [Select], and then press the SET button.**

- The frame of the selected image turns green.

4 **Select multiple images.**

- Use the four-way control to select the image.
- Press the **SET** button toggles the 🗑 on and off. Repeat this step until all images that you want to delete are displayed with an icon 🗑.

5 **Delete images.**

- Press the **MENU** button, then select **[Yes]** and press the **SET** button. All selected images will be deleted.
- To cancel delete, press the **MENU** button in this step.

Deleting All Files

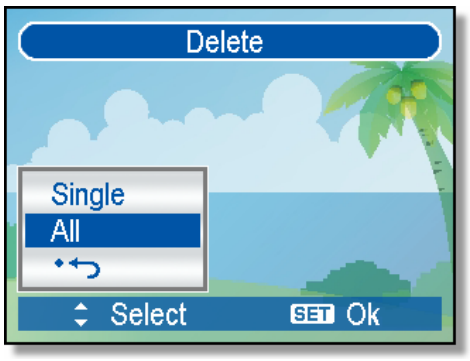

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Delete** (🗑)and press the **SET** button.
- You can open the menu in full screen or in thumbnail.

3 **Press ▲ or ▼ to select [ALL], and then press the SET button.**

4 **Press the SET button to delete all unprotected images.**

Downloaded from www.Manualslib.com manuals search engine

Protecting a Single File

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Protect** (⚿) and press the **SET** button.

3 **Press ▲ or ▼ to select [SINGLE], and then press the SET button.**

4 **Press ◀ or ▶ to select the image you want to protect.**

5 **Press the SET button to protect the image.**

- When the file is locked, the ⚿ displays on the LCD monitor.
- Repeat step 4~5 to protect images.
- To unlock the file, press the **SET** button again in step 5. The ⚿ will disappear and the file is unlocked.

Protecting All Files

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Protect** (⚿) and press the **SET** button.
- You can open the menu in full screen or in thumbnail.

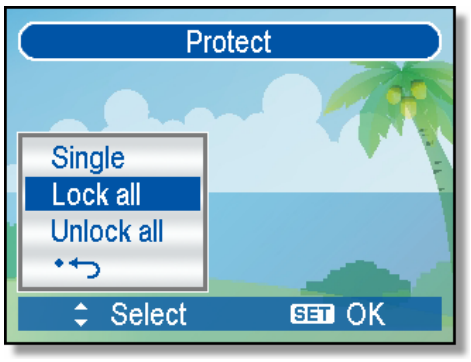

3 **Press ▲ or ▼ to select [Lock all], and then press the SET button.**

- To unlock all files, select **[Unlock all]** in this step, then press the **SET** button.

4 **Press the SET button to protect all images.**

Downloaded from www.Manualslib.com manuals search engine

Protecting Multiple Files

1 **Turn the power on, and set the camera to the thumbnail screen (☞page 34).**

2 **Open the menu.**

- Press the **MENU** button, then Press ◀ or ▶ to select to select **Protect** (⚷) and press the **SET** button.

3 **Press ▲ or ▼ to select [Select], and then press the SET button.**

- The frame of the selected image turns green.

4 **Select multiple images.**

- Use the four-way control to select the image.
- Press the **SET** button toggles the ⚷ on and off. Repeat this step until all images that you want to protect are displayed with an icon⚷.

5 **Protect images.**

- Press the **MENU** button, then select **[Yes]** and press the **SET** button. All selected images will be protected.
- To cancel protect, press the **MENU** button in this step.

Downloaded from www.Manualslib.com manuals search engine

Editing Images

Rotating Still Images

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press ◀ or ▶ to select the image you want to rotate.**

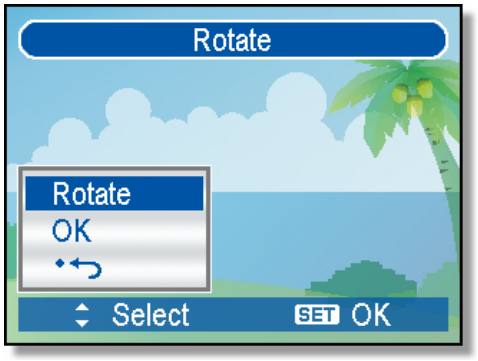

3 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Rotate** (⊞) and press the **SET** button.

4 **Press the SET button to rotate the image.**

- Each press rotates the image 90 degrees in clockwise.

5 **Press ▲ or ▼ to select OK, and then press the SET button to finish rotating.**

Changing the Image Size

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press ◀ or ▶ to select the image you want to resize.**

3 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Resize** (⊡) and press the **SET** button.

4 **Press ▲ or ▼ to select an option, and then press the SET button.**

- The resized image will be saved as a new file.

Caution

- Only a large size image can be resize to a smaller one.

Downloaded from www.Manualslib.com manuals search engine

Changing the Image with Effects

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Press ◀ or ▶ to select the image you want to add the effect.**

3 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Effect** (🎨) and press the **SET** button.

4 **Press ▲ or ▼ to select an option, and then press the SET button.**

- The edited image will be saved as a new file.

Downloaded from www.Manualslib.com manuals search engine

Copying the Files

You may copy the data from the camera's internal memory to the memory card for convenience.

1 **Be sure you have inserted a memory card into your digital camera. Set the camera to the PLAYBACK mode. (☞ page 13).**

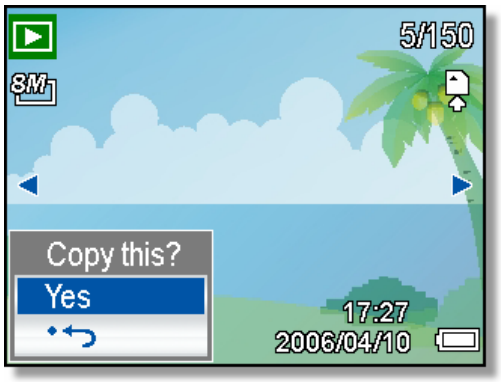

2 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **Copy to card** ( ) and press the **SET** button.

3 **Press ▲ or ▼ to select [Single], then press the SET button.**

- To copy all images to a memory card, select **[All].**

4 **Press ◀ or ▶ to select the image you want to copy to a card.**

5 **Select [Yes] and then press the SET button to start copy.**

- Repeat step 4~5 to copy other images.
- Press the **MENU** button to complete the setting.

Downloaded from www.Manualslib.com manuals search engine

Setting the DPOF

The Digital Print Order Format (DPOF) setting allows you to select images on the memory card for printing and specify the number of print copies in advance using the camera. This is extremely convenient for sending the images to a photo developing service or for printing on a direct print function compatible printer.

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

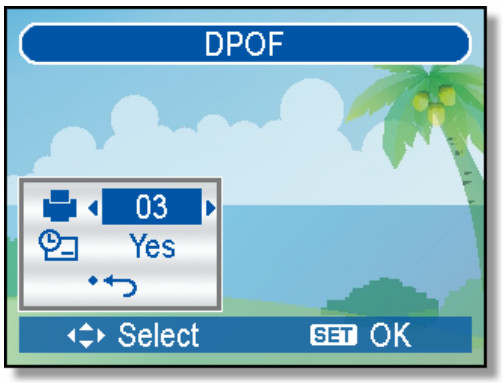

2 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **DPOF** ( ) and press the **SET** button.

3 **Press ▲ or ▼ to select [Single], then press the SET button.**

- To set the DPOF setting for all images, select **[All]** in this step.
- To reset all DPOF settings to initial default, select **[Reset]** in this step.

4 **Press ◀ or ▶ to select the image you want to print out, then press the SET button.**

5 **Set the number of copies.**

- Press ◀ or ▶ to specify the number of copies.
- The number of copies can be set from 0 to 30.
- To cancel this image DPOF setting, set the number of copies to 0.

6 **Print the date stamp out.**

- Press ▼ and then press ◀ or ▶ to set or cancel the date stamp of current image.
- Repeat step 4~6 to other images for printing.

7 **Press ▼ and then press the SET button to apply the setting or press the MENU button to cancel.**

8 **After you finished all image settings, select [ ] and press the SET button to apply it.**

Downloaded from www.Manualslib.com manuals search engine

Choosing a Startup Image

1 **Turn the power on, and set the camera to the PLAYBACK mode (☞page 13).**

2 **Open the menu.**

- Press the **MENU** button, then use the four-way control to select **S.Image** (🖼) and press the **SET** button.

3 **Press ◀ or ▶ to select the image you want, then press the SET button to apply the choice.**

- A message “Completed” appears.

4 **Set the camera to the Setup Menu (☞page 16).**

5 **Press ▲ or ▼ to select S.Image (🖼) then press ▶ or the SET button.**

6 **Press ▲ or ▼ to select a desired option and press the SET button to apply the setting.**

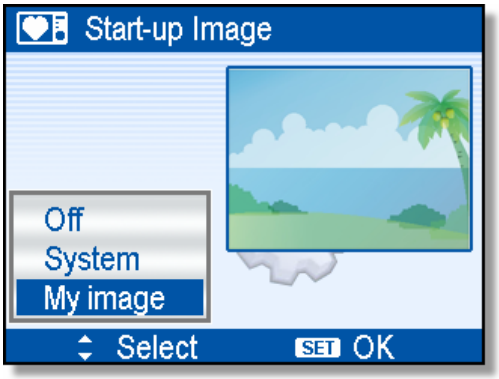

[Off]: Disable the start-up image.
[System]: Use camera default image.
[My image]: Use the image that you just specified in step 3.

7 **Press the MENU button to close the menu.**

Caution

- The start-up image will not be deleted even if the original image is deleted or memory formatted.

Downloaded from www.Manualslib.com manuals search engine

Making Connections

Connecting the Camera to a TV

You can display recorded images on a television with a supplied AV cable.

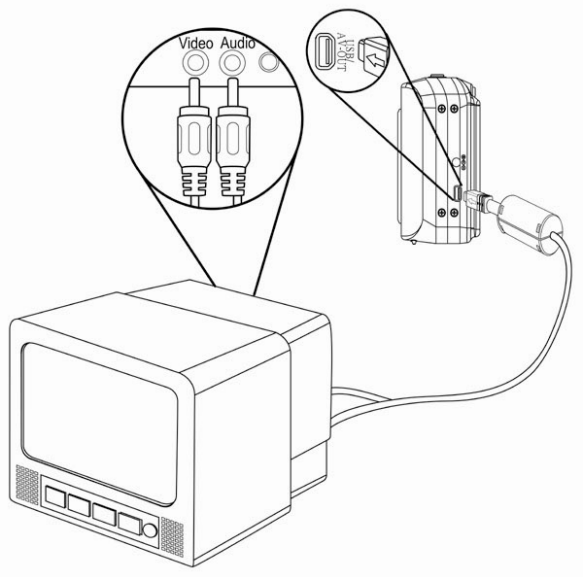

1 **Set the TV out to match the TV system that you are using (☞page 18).**

2 **Turn off the camera and the TV.**

3 **Use the supplied AV cable to connect the camera to the TV set.**

4 **Set the TV input signal to Video In.**

- Refer to the documentation included with your TV for more information.

5 **Display on TV.**

- Everything that would normally appear on the camera's LCD screen, such as photo and video clip playback, slide shows, and image or video capture, appears on the TV.

Downloaded from www.Manualslib.com manuals search engine

Connecting the Camera to a PC

There are two ways to download files from the camera's internal memory or memory card to a computer:

- Inserting the memory card into a card reader
- Connecting the camera to a computer using the supplied USB cable

Using the Card Reader

1. **Eject the memory card from the camera and insert it in a card reader that is connected to a computer.**

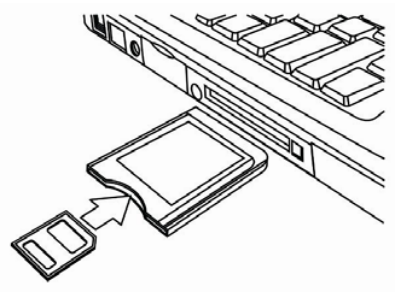

2. **Open [My Computer] or [Windows Explorer] and double-click the removable drive icon that represents the memory card.**
3. **Copy images from the card into a directory of your choice on the computer's hard disk.**

Connecting the Camera to a Computer with the USB Cable

1. **Install the USB software driver included with the bundled CD-ROM.**
2. **Connect the supplied USB cable to the computer's USB port and turn on the camera.**
   - The LCD screen turns off when the connection to the computer has been successfully completed.

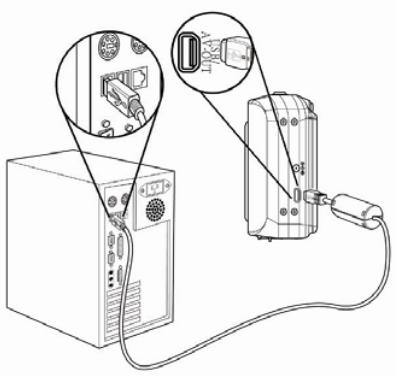

3. **Open [My Computer] or [Windows Explorer]. A "Removable Disk" appears in the drive list.**
4. **Double-click the "Removable Disk" icon to view its contents.**
   - Files stored on camera are located in the folder name "DCIM".

Downloaded from www.Manualslib.com manuals search engine

Appendix

About the Folder & File Name

Your digital camera automatically creates a directory of folders in the internal memory or memory card that it uses to organize still images, movie clips and other information.

Folder Structure

Folder name begins with a 3-digit number from 100 to 999 and followed by “DICAM”, each folder holds up to 9999 files. If new files are made, a new folder named in sequence will be made automatically.

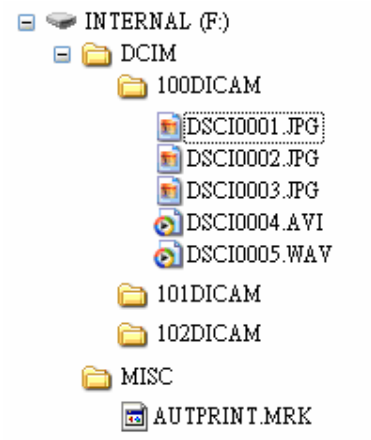

File Naming

File name begins with “DSCI” and are followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

If the highest folder number is 999 and highest file number exceeds 9999, the camera will display the warning message “Folder cannot be created”. When it appears, try one of the following ways:

- Reset the file number and plug in a new memory card.
- The folder number and file number are initialized and renumbered from 100 and 0001 respectively.

Caution

- Do not change the folder and file names in the memory card using your computer. It may be unable to playback the data using the digital camera.

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Problem	Cause	Solution
Power does not turn on.	Battery is inserted in the wrong direction.	Reload battery in the correct direction.
	Batteries are dead.	Replace or recharge batteries.
	The battery compartment door is open.	Make sure the battery compartment door is securely closed.
The camera does not take pictures.	The flash is charging.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
	Memory card is not formatted correctly.	The card may be defective, use a new card.
Image is not recorded when the shutter button is pressed.	The Flash is charge.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
The flash does not fire.	Flash is set to OFF.	Set the flash to any mode except off.
Image is blurry or out of focus.	The camera was moving when the image was captured.	Hold the camera steady when shooting picture.
	The subject was beyond the range within which the camera can focus.	Turn the Macro mode on it the subject is within 15 cm or 40 cm. Do not use Macro mode when shooting distant subjects.
Image is not displayed on the LCD monitor.	A memory card with non-DCIF images (recorded with other camera) is loaded.	This camera cannot display non-DCIF images.
Recorded images are not saved in memory.	The camera was turned off / powered down before the image was stored in memory.	If the battery low indicator appears on the LCD monitor, replace the battery immediately.
Cannot transfer images to a computer after connecting the USB cable.	USB driver is not installed.	Install the USB driver before you connect the camera to a computer / turn the camera on.
Card error	The memory card format may not be correct.	Re-format the memory card to the FAT format using a card reader in Windows.

Downloaded from www.Manualslib.com manuals search engine

Specifications

Sensor	8 Mega Pixels CCD, Size : 1/2.5 inch
Lens	Focal Length : f = 6.2 (W) ~ 18.6 (T) mm , 3X optical zoom, 4X digital zoom
LCD monitor	2.5” LCD monitor
Focus Range	Normal: 80cm ~ Infinity (from the tip of barrier) Macro: (W) 15 cm ~ 1 m / (T) 40 cm~ 1 m (from the tip of barrier)
Aperture	F/ 2.8 (W), 5.2 (T)
Shutter	8 ~ 1/2000 sec.
File Format	Still Image: EXIF 2.2 compatible format (JPEG compression), DCF compatible. Support DPOF, (PictBridge available) Video: AVI , Audio: WAV
Resolution	Still Image: 3264 x 2448 (8M) / 3264 x 2176 (3:2) / 3264 x 1840 (16:9) / 2816 x 2112 (6M) / 2272 x 1704 (4M) / 1600 x 1200 (2M) / 640x480 (VGA) , Video: 720x400 / 640x480 / 320x240
Scene Mode	Program /Movie / Voice REC / Sunset / Backlight / Q. Mode / Landscape / Portrait / Snow / Fireworks / Night scene / Kids / Food / Building / Text
Sensitivity	Auto / ISO 50 / ISO 100 / ISO 200 / ISO 400
White Balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent (H) / Fluorescent (L) / Custom
Exposure Control	-2EV to +2EV in 1/3 step
Metering	Center-weighted / Multi / Spot
Burst	Depends on the capacity of the memory. (no limit)
Self-timer	2 sec. / 10 sec. / Double
Flash	Auto / Red eye reduction / Always on / Slow sync / Always off
Photo Effect	Black & White / Sepia / Negative / Mosaic / Red / Green / Blue
Storage	16 MB internal memory / SD Card
TV system	NTSC / PAL
Power Supply	AA rechargeable Ni-MH battery X2 (option) AA alkaline battery X2
Ambient temperature	Operating: 0° C to 40° C Storage: -20 to 60° C
Microphone	Built-in
Speaker	Built-in
Dimension	Camera Body (W x H x T) : 89.5 x 61.3 x 27 mm
Weight	Camera Body w/o battery : Approx. 120 (g)

*These specifications are subject to change without notice.

Downloaded from www.Manualslib.com manuals search engine

Function Available List

Function \ Mode			Still Capture															
			P															
Shutter & Lens	Focus	One time AF	●	●	×	●	×	●	●	×	●	×	×	●	●	●	×
		Continuous AF	×	×	×	×	×	×	×	×	×	●	●	×	×	×	×
		Infinity Fixed	×	×	●	×	●	×	×	●	×	×	×	×	×	×	×
	Shutter Speed		8~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	2 sec. fixed.	8~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1~ 1/2000	1/15~ 1/2000	×
Button	Macro	Off	●	●	●	●	●	●	●	●	●	●	○	●	×	●	×
		On	○	○	×	×	×	×	×	×	×	×	●	×	●	○	×
	Flash	Auto	✓	○	×	×	×	×	●	×	×	×	●	●	×	×	×
		Red eye	○	○	×	×	×	●	×	×	×	●	×	×	×	×	×
		Force on	○	○	×	●	×	×	×	×	×	×	×	×	×	×	×
		Slow sync	○	○	×	×	×	×	×	×	●	×	×	×	×	×	×
		Force off	○	○	●	○	●	○	○	●	○	○	○	○	●	×	×
MENU	Resolution	8M	✓	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		16:9	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		3:2	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		6M	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		4M	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		2M	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		VGA	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Movie Size	16:9	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		640	×	×	×	×	×	×	×	×	×	×	×	×	×	✓	×
		320	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×
	Quality	S.Fine	○	●	○	○	○	○	○	○	○	○	○	○	○	×	×
		Fine	✓	×	○	○	○	○	○	○	○	○	○	○	○	×	×
		Normal	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×
	Metering	Center	○	×	○	○	○	○	○	×	○	○	○	○	○	○	×
		Multi	✓	●	●	×	●	●	●	●	●	●	●	●	●	○	×
		Spot	○	×	×	●	×	×	×	×	×	×	×	×	×	○	×
	WB	Auto	✓	●	●	●	●	●	●	●	●	●	●	●	●	○	×
		Daylight	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		Cloudy	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		Tungsten	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		Fluor_H	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		Fluor_L	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		Custom	○	×	×	×	×	×	×	×	×	×	×	×	×	○	×

Downloaded from www.Manualslib.com manuals search engine

Function		Mode	Still Capture														
			P														
	ISO	Auto	✓	●	●	●	●	●	●	●	×	●	●	●	●	×	×
		50	○	×	×	×	×	×	×	×	●	×	×	×	×	×	×
		100	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		200	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		400	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Exposure	+0.3 ~ +2.0	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		0.0	✓	●	●	●	●	●	●	●	●	●	●	●	●	×	×
		-0.3 ~ -2.0	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Drive Mode (*)	Off	✓	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		2 sec.	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		10 sec.	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		Double	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		Burst	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	AEB	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×
		On	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Highlight	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×
			○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
			○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
			○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Sharpness	Hard	○	×	●	×	●	×	×	×	×	×	×	●	×	×	×
		Normal	✓	●	×	●	×	●	●	●	●	●	●	×	●	×	×
		Soft	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Effect	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×
		B&W	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
		Sepia	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
		Negative	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
		Red	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
		Green	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
		Blue	○	×	×	×	○	○	×	×	×	○	○	○	×	×	×
	Date Stamp	Off	✓	×	○	○	○	○	○	○	○	○	○	○	○	×	×
		Date	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×
		Date & Time	○	●	○	○	○	○	○	○	○	○	○	○	○	×	×
	Digital Zoom	Off	○	●	○	○	○	○	○	○	○	○	○	○	○	×	×
		On	✓	×	○	○	○	○	○	○	○	○	○	○	○	×	×

Downloaded from www.Manualslib.com manuals search engine

✓: Factory setting ● : Default ○ : Available × : Not available.

: Setting is retained even after mode switch or power off.

(*): Set to [OFF] after power off.

Downloaded from www.Manualslib.com manuals search engine

Rollei

RCP-Technik GmbH & Co. KG
Tarpen 40/Gebäude 6b
D-22419 Hamburg
Hotline +49 (0)6 31/3 42 84 49
welcome@rcp-technik.com
www.rcp-technik.com

Subject to technical changes!

Dow www.Manualslib.com

Rollei

- QUICK START GUIDE
- GUIDE D'UTILISATION RAPIDE
- KURZANLEITUNG
- GUÍA RÁPIDA DE INICIO
- GUIDA RAPIDA

RCP-8325

8 MEGA PIXELS | ROLLEI 3x APOGON ZOOM |
2.5" COLOUR LTPS-LCD | USB 2.0 FULL SPEED | SDHC 4 GB SUPPORT

MOVIE Function | 5x Function | Anti RedEye | PictBridge

Download this manual from www.vandenborre.be - manuals search engine

Download from Www.Somanuals.com. All manuals search engine

RCP-8325

8 MEGA PIXELS |

ROLLEI 3X APOGON ZOOM |

2.5" COLOUR LTPS-LCD |

USB 2.0 FULL SPEED |

SDHC 4 GB SUPPORT |

QUICK START GUIDE	**4**
GUIDE D'UTILISATION RAPIDE	**8**
KURZANLEITUNG	**12**
GUÍA RÁPIDA DE INICIO	**16**
GUIDA RAPIDA	**20**

Download from Www.Somanuals.com. All manuals search engine

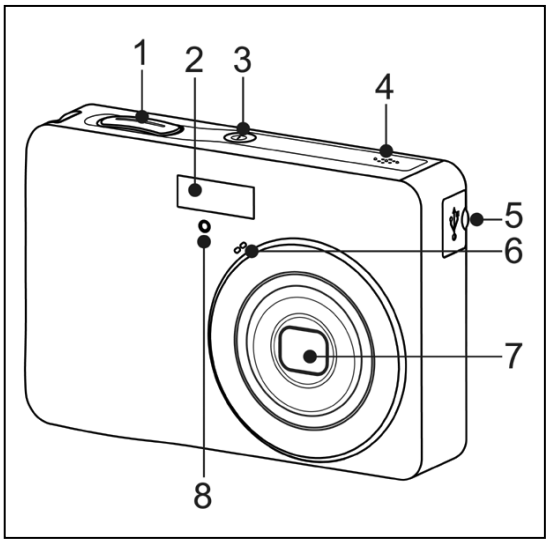

1. Shutter Button
2. Flash
3. Power Button
4. Speaker
5. USB/AV Terminal
6. Microphone
7. Lens
8. Self-timer Lamp

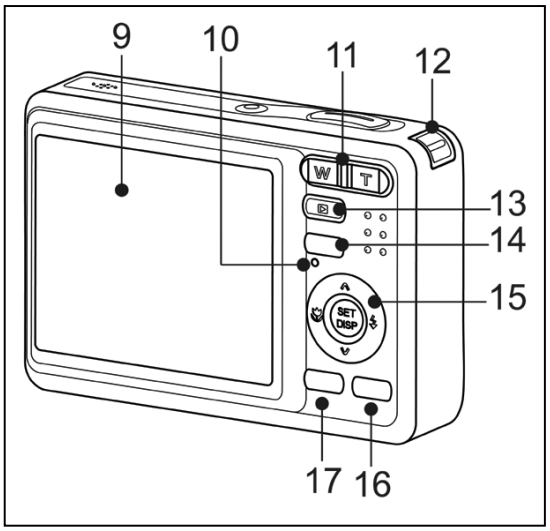

9. LCD Monitor
10. Operation Lamp
11. Zoom Button
12. Strap Ring
13. Playback Button
14. Menu Button
15. Four-way Control
    - Flash Button
    - Macro Button
    - SET / DISP Button
16. Mode Button
17. Delete Button

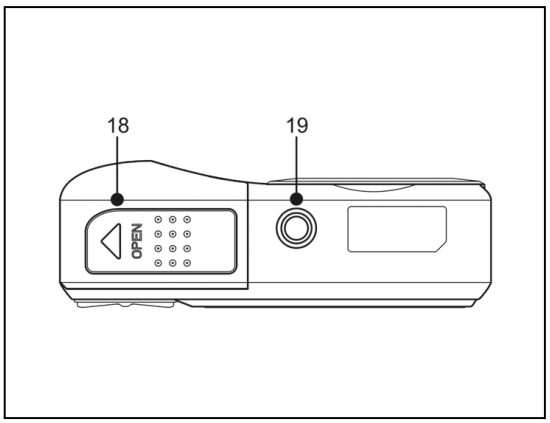

18. Battery Cover
    - The memory card slot is located beneath the battery cover, adjacent to the battery compartment.
19. Tripod Socket

QuickStartGuide_8325.indd 4 20.03.2008 12:54:47 Uhr
Downloaded from www.vandenborre.be - Electronic manuals search engine

Inserting the Batteries

1 **Open the battery cover.**

- Slide the battery cover in the direction indicated by the arrow.

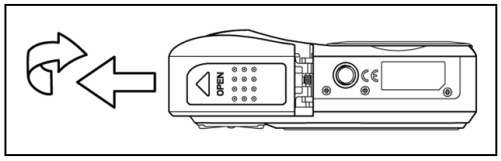

2 **Insert the batteries.**

- Insert two AA-size batteries with the positive (+) and negative (-) poles matching the directions indicated inside the battery room.

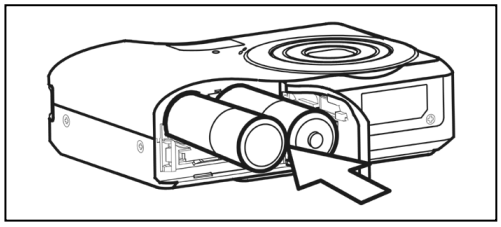

3 **Close the battery cover.**

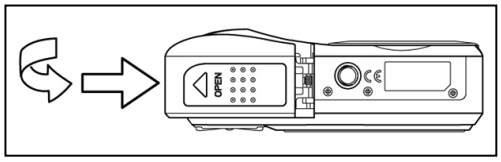

Changing the Mode

You can record images and voices in the REC mode. And using the PLAYBACK mode to replay, delete, or edit images on the LCD monitor.

Switching between REC mode and PLAYBACK mode

In REC mode:
Press the **PLAYBACK** button ▶ (❶) to switch to the PLAY mode.

In PLAY mode:
Press the **PLAYBACK** ▶ (❶) or the **MODE** (❷) button to switch to the REC mode.

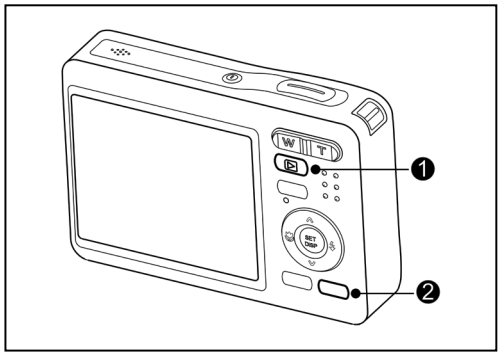

QuickStartGuide_8325.indd 5 20.03.2008 12:54:48 Uhr
Downloaded from www.vandenborre.be manuals search engine

Selecting the REC mode

1 **Set the camera to the REC mode.**

2 **Launch the mode palette.**
- Press the **MODE** button (❷) to show the scene mode palette.

3 **Select a mode.**
- Use the four-way control to select a desired mode and press the **SET** button to confirm the setting.

Using the Menus

When a menu is displayed, the four-way control and the **SET** button are used to make the desired settings.

REC menu

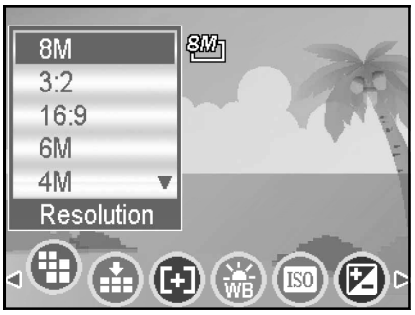

1 **Turn the power on, and set the camera to the REC mode.**

2 **Open the REC menu.**
- Press the **MENU** button to display the menu.

3 **Select an item.**
Press ◄ or ► to select a menu item.

4 **Change the setting.**
Press ▲ or ▼ to change the setting.

5 **Press the MENU or the SET button to save the settings and close the menu.**

QuickStartGuide_8325.indd 6 20.03.2008 12:54:49 Uhr
Downloaded from www.vandenborre.be - Manuals search engine

Setup menu

1 **Turn the power on, and set the camera to the REC or PLAYBACK mode.**

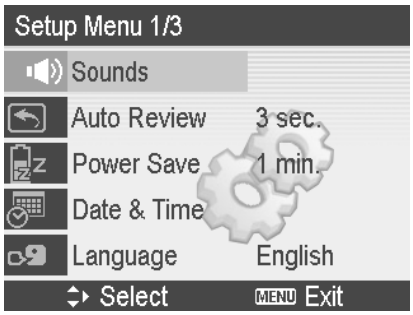

2 **Press the MENU button to open the REC or PLAYBACK menu.**

- The menu displays depends on whether you are in the REC mode or the PLAY-BACK mode.

3 **Open the Setup menu.**

- Press four-way control to select **SETUP** (🔧) and then press the **SET** button to display the Setup menu.

4 **Select an item.**

- Press ▲ or ▼ to select a menu item and then press ► or the **SET** button to launch the submenu.

5 **Change the setting.**

- Press ▲ or ▼ to select an option and press ◄ or the **SET** button to apply the setting.

6 **Press the MENU button to close the menu.**

- When the O/S is Windows 98/98SE, use mouse right click on the program file named „DSC driver" or „DSC User manual" located in the CD-ROM.

QuickStartGuide_8325.indd 7 20.03.2008 12:54:51 Uhr
Download from Www.Somanuals.com. All manuals search engine

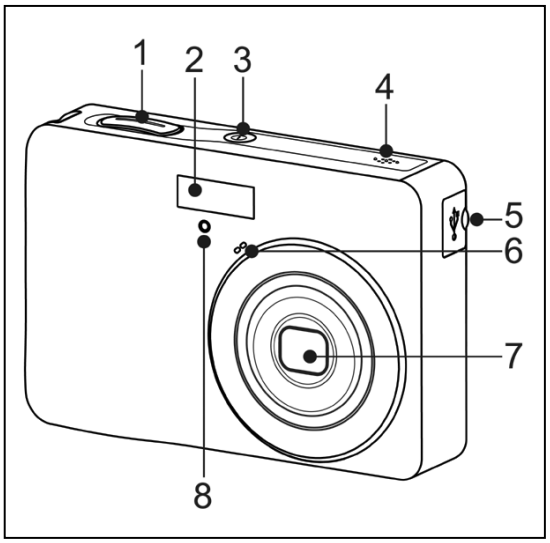

1. Interrupteur d'alimentation
2. Flash
3. Déclencheur
4. Haut-parleur
5. Port USB / Prise sortie vidéo
6. Micro
7. Objectif
8. Lampe du retardateur

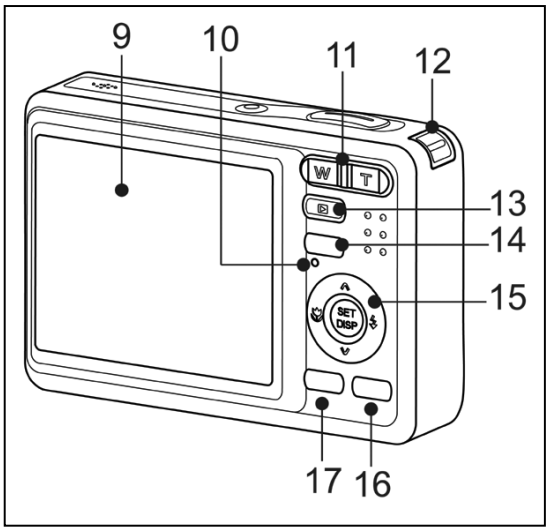

9. Ecran LCD
10. Indicateur de marche
11. Bouton zoom:
12. Attache de la lanière
13. Mode lecture bouton
14. Bouton MENU
15. Boutons multifunction quadridirectionnel
    - Bouton Flash
    - Bouton Macro
    - Bouton DISP/ SET
16. Bouton mode de caméra
17. Bouton Effacer

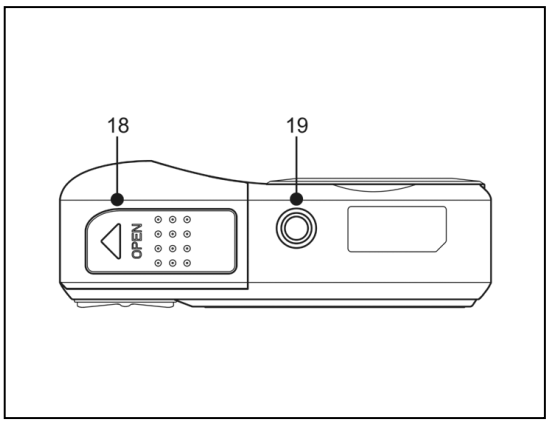

18. Capot batterie
    - L'emplacement de la carte mémoire est situé en dessous du couvercle des piles, adjacent au compartiment des piles.
19. Prise pour trépied

QuickStartGuide_8325.indd 8 20.03.2008 12:54:52 Uhr
Download from Www.Somanuals.com. All manuals search engine

Insertion des piles

1 **Faire glisser le couvercle des piles pour ouvrir.**

- Glissez le couvercle des piles dans le sens indiqué par la flèche.

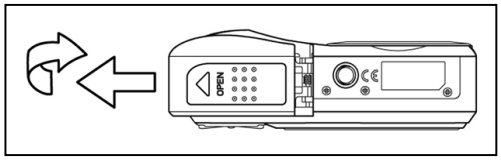

2 **Insérez les piles.**

- Insérer deux piles alcalines de type AA avec les pôles positifs (+) et négatifs (-) correspondants aux instructions à l'intérieur du compartiment des piles.

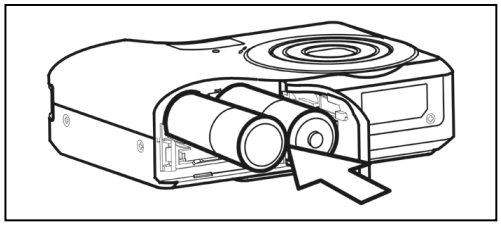

3 **Faire glisser le couvercle des piles pour fermer.**

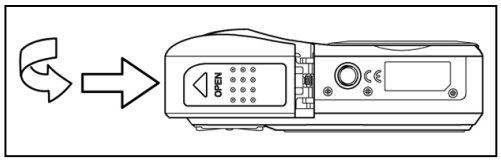

Changer le mode

Vous pouvez enregistrer des images et des voix dans le mode ENR. Et utiliser le mode LECTURE pour relire, supprimer ou éditer les images sur le moniteur LCD.

Basculer entre le mode ENR et le mode LECTURE

En mode Enregistrement:
Appuyez sur le bouton ▶ (❶) pour basculer au mode Revue.

En mode Revue:
Ppuyez sur le bouton **MODE** (❷) ou ▶ (❶) pour basculer au mode Enregistrement précédemment utilisé.

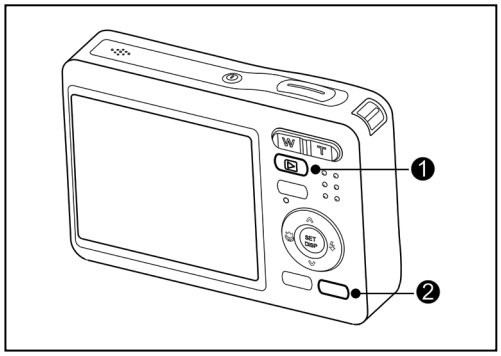

Downloaded from www.vandenborre.be manuals search engine

Sélectionner le mode ENR

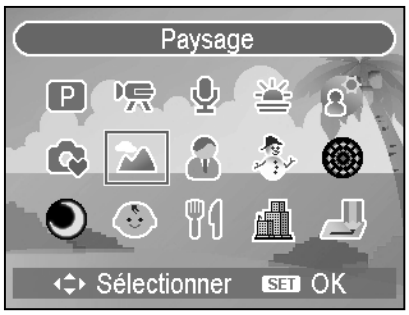

1 **Réglez l'appareil sur le mode Enregistrement.**

2 **Lancer la palette de modes**
- Appuyez sur le bouton **MODE** (❷) pour afficher l'écran Mode de scène.

3 **Sélectionner un mode.**
- Utilisez le bouton directionnel pour sélectionner un mode de scène désiré et appuyez sur le bouton **SET** pour confirmer le réglage.

Utiliser les Menus

Lorsqu'un menu est affiché, la commande directionnelle et le bouton **REGLER** sont utilisés pour effectuer les réglages désirés.

REC menu

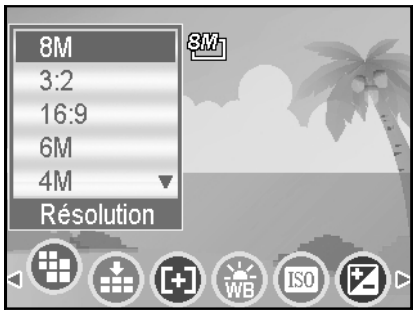

1 **Mettez sous tension, et réglez l'appareil photo sur le mode ENR.**

2 **Ouvrez le menu ENR.**
- Appuyez sur le bouton **MENU** pour afficher le menu.

3 **Sélectionnez un élément.**
- Appuyez sur ◄ ou ► pour sélectionner un élément de menu.

4 **Changez le paramètre.**
- Appuyez sur ▲ ou ▼ pour changer le réglage.

5 **Appuyez sur le bouton MENU ou SET pour sauvegarder les réglages et fermer le menu.**

Download from Www.Somanuals.com. All manuals search engine

Menu Configuration

1 **Mettez sous tension, et réglez l'appareil photo sur le mode ENR ou LECTURE.**

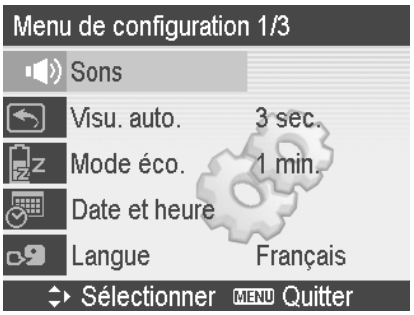

2 **Appuyez sur le bouton MENU pour ouvrir le ENR ou LECTURE.**

- L'affichage de menu dépend de si vous êtes en mode Enregistrement ou en mode Revue.

3 **Ouvrez le menu configuration.**

- Depuis, s'il vous plaît appuyez sur le bouton **MENU** (🔧) pour choisir le menu de configuratión et appuyant sur le bouton **SET** confirmez que s' ouvre ce menu.

4 **Sélectionnez un élément.**

- Appuyez sur ▲ ou ▼ pour sélectionner une option et appuyez sur ▶ ou sur le bouton **SET** pour appliquer le réglage.

5 **Changez le paramètre.**

- Appuyez sur ▲ ou ▼ pour sélectionner une option et appuyez sur ◀ ou sur le bouton SET pour appliquer le réglage.

6 **Appuyez sur le bouton MENU pour fermer le menu.**

- Lorsque l'O/S est Windows 98/98SE, utilisez le clic droit de la souris sur le fichier programme nommé „DSC driver (Pilote DSC)" ou „DSC User manual (Mode d'emploi DSC)" situé sur le CD-ROM.

QuickStartGuide_8325.indd 11 20.03.2008 12:54:55 Uhr
Downloaded from www.vandenborre.be - Free manuals search engine

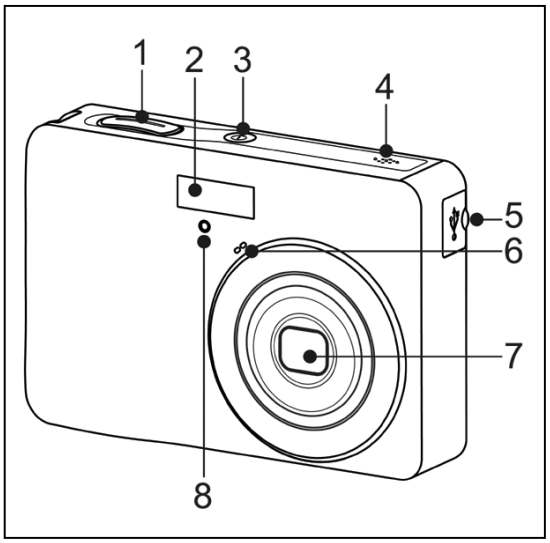

1. Auslöser
2. Blitz
3. Netztaste
4. Lautsprecher
5. USB-Port /Video-Ausgang
6. Mikrofon
7. Objektiv
8. Selbstauslöserleuchte

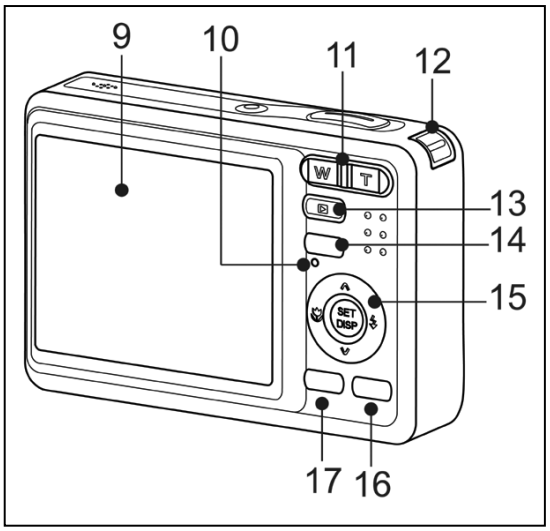

9. LCD-Anzeige
10. Betriebsleuchte
11. Zoom Taste
12. Schlaufe
13. Wiederabemodus-Taste
14. MENÜ-Taste
15. 5-funkionstasten
    - Blitz
    - Makro -Taste
    - SET/DISP-Taste
16. Kameramodus-Taste
17. Löschen

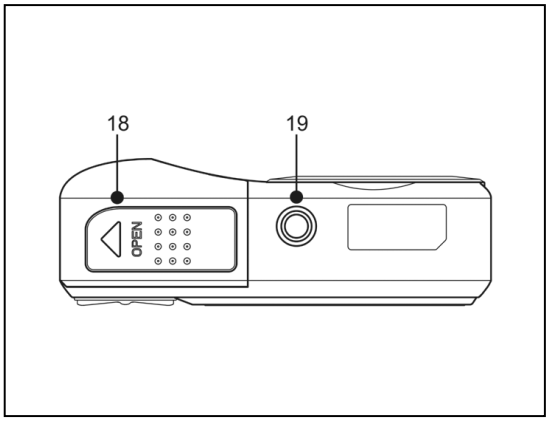

18. Batteriedeckel und Speicher-kartenfach
    - Der Speicherkarteneinschub befindet sich unter der Batterie-fachabdeckung neben dem Batteriefach.
19. Stativanschluss

QuickStartGuide_8325.indd 12 20.03.2008 12:54:56 Uhr
Downloaded from www.vandenborre.be - Digital camera manuals search engine

Einlegen der Batterien

1 **Öffnen Sie die Batteriefachabdeckung.**

- Schieben Sie den Batteriefachdeckel in Pfeilrichtung.

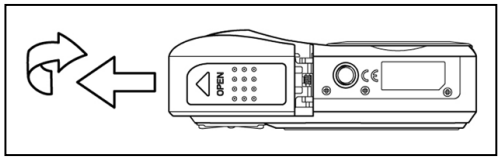

2 **Legen Sie die Batterien ein.**

- Legen Sie zwei AA-Alkalibatterien mit den positiven (+) und negativen (-) Polen jeweils wie im Batteriefach angezeigt ein.

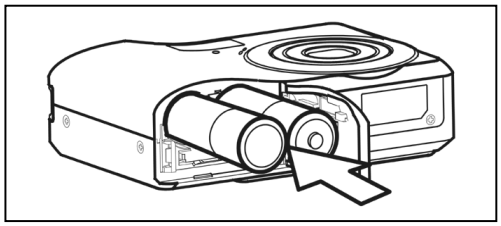

3 **Schließen Sie die Batteriefachabdeckung.**

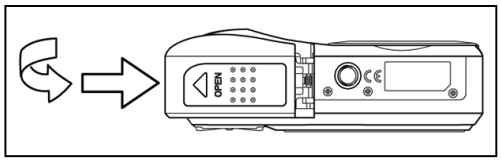

Modus ändern

Im Aufnahmemodus können Sie Bilder und Sprache aufnehmen.Im Wiedergabemodus.

Zwischen Aufnahmemodus und Wiedergabemodus umschalten

Im Aufnahmemodus:
Drücken Sie die Taste ▶ (❶), um in den Wiedergabemodus umzuschalten.

Im Wiedergabemodus:
Drücken Sie die Taste **MODE** (❷) oder die Taste ▶ (❶), um in den zuvor verwendeten Aufnahmemodus umzuschalten.

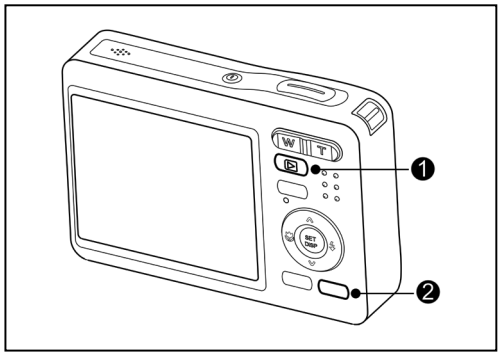

Downloaded from www.vandenborre.be - Manuals search engine

Aufnahmemodus wählen

1 **Stellen Sie die Kamera in den Aufnahmemodus.**

2 **Zeigen Sie die Modusauswahl an.**
- Drücken Sie die Taste **MODE** (❷), um den Motivmodusbildschirm aufzurufen.

3 **Aufnahmemodus wählen.**
- Verwenden Sie die Pfeiltasten, um einen gewünschten Motivmodus auszuwählen und drücken Sie die Taste **SET**, um die Einstellung zu bestätigen.

Verwendung der Menüs

Wenn ein Menü angezeigt wird, nehmen Sie die gewünschten Einstellungen mit der Vierwegschalter und der **SET**-Taste vor.

Aufnahmemenü

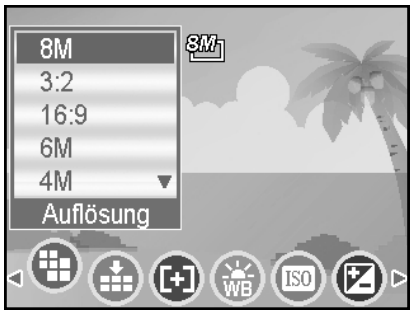

1 **Schalten Sie die Kamera ein und rufen Sie den Aufnahmemodus auf.**

2 **Öffnen Sie das Aufnahmemenü.**
- Drücken Sie die Taste **MENU**, um das Menü aufzurufen.

3 **Wählen Sie ein Element.**
- Drücken Sie die Taste ◄ oder ►, um einen Menüpunkt auszuwählen.

4 **Ändern Sie die Einstellung.**
- Drücken Sie die Taste ▲ oder ▼, um eine Einstellung zu ändern.

5 **Drücken Sie die Taste MENU oder SET, um die Einstellung zu speichern und das Menü zu schließen.**

QuickStartGuide_8325.indd 14 20.03.2008 12:54:57 Uhr
Downloaded from www.vandenborre.be - Your manuals search engine

Setup-Menü

1 **Schalten Sie die Kamera ein und rufen Sie den Aufnahme- oder den Wiedergabemodus auf.**

2 **Öffnen Sie das Aufnahme- oder Wiedergabemenü mit der MENU-Taste.**

- Das angezeigte Menü hängt davon ab, ob Sie sich im Aufnahmemodus oder im Wiedergabemodus befinden.

3 **Öffnen Sie das Einrichtungsmenü.**

- Wählen Sie **Einrichtung** mit dem Vierwegschalter (🔧), öffnen Sie danach das Einrichtungsmenü mit der **SET**-Taste.

4 **Wählen Sie ein Element.**

- Drücken Sie die Taste ▲ oder ▼, um einen Menüpunkt auszuwählen und drücken Sie anschließend die Taste ► oder **SET**, um das Untermenü aufzurufen.

5 **Ändern Sie die Einstellung.**

- Drücken Sie die Taste ▲ oder ▼, um eine Option auszuwählen und drücken Sie die Taste ◄ oder **SET**, um die Einstellung zu übernehmen.

6 **Drücken Sie die Taste MENU, um das Menü zu schließen.**

- Wenn Sie mit Windows 98/98SE arbeiten, klicken Sie mit der rechten Maustaste auf die Programmdatei „DSC-Treiber" oder „DSC-Bedienungsanleitung" auf der CD-ROM.

Downloaded from www.vandenborre.be - Manuals search engine

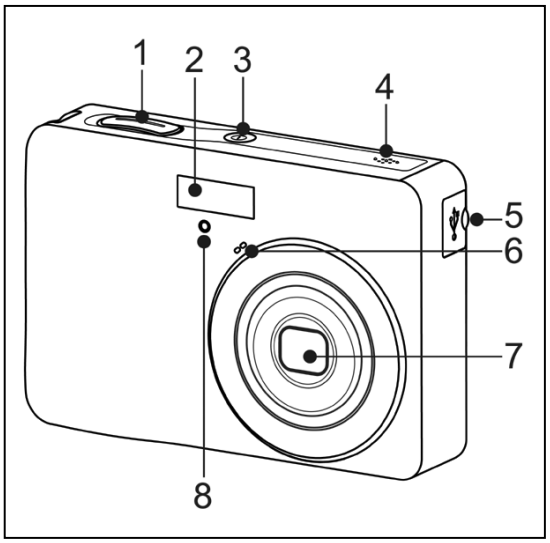

1. Botón del obturador
2. Flash
3. Botón de encendido
4. Altoparlant
5. Puerto USB / Terminal salida vídeo
6. Micrófono
7. Lente
8. Luz del disparador automático

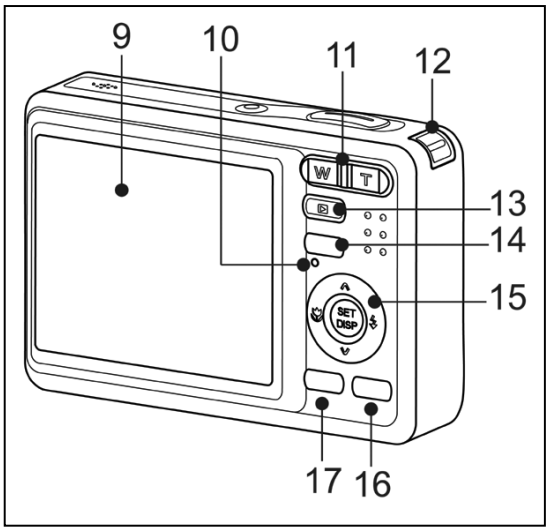

9. Pantalla LCD
10. Luz de operación
11. Zoom Button:
12. Montaje de la correa
13. Botón del modo reproducción
14. Botón MENU
15. Botones multifunction de 5 opciones
    - Botón Macro
    - Botón DISP/SET
    - Botón Flash
16. Botón de modo la cámara
17. Botón Borrar

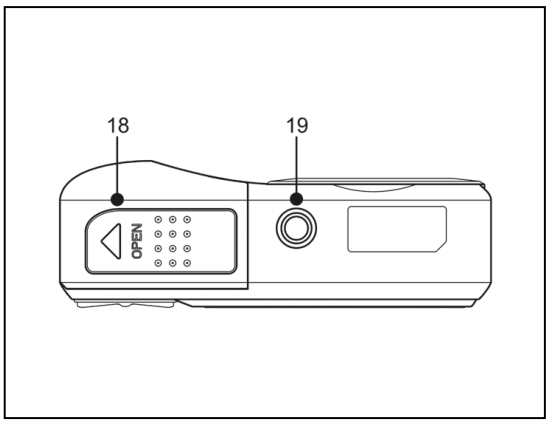

18. Tapa de la bateria
    - La ranura de la tarjeta de memoria se encuentra junto cerca de la tapa de las baterías, junto al compartimento.
19. Soporte del tripode

Downloaded from www.vandenborre.be - Free manuals search engine

Cómo instalar las baterías

1 **Abra la tapa de las baterías.**

- Desplace la tapa de las pilas en la dirección que indica la flecha.

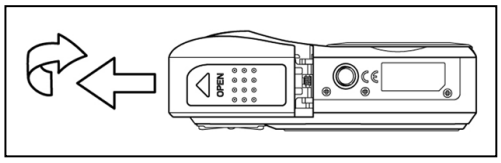

2 **Inserte las pilas.**

- Inserte dos baterías alcalinas tipo AA de forma que los polos positivo (+) y negativo (-) coincidan con las direcciones que se indican en el interior del compartimento de las baterías.

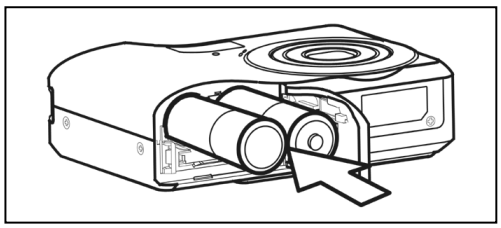

3 **Cierre la tapa de las baterías.**

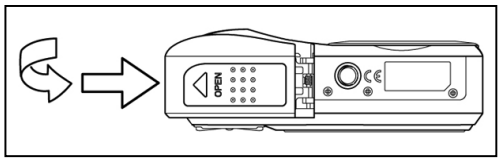

Cambiar de modo

En el modo GRABAR puede grabar imágenes y voces. Mediante el modo reproducir puede reproducir, eliminar o editar imágenes en el monitor LCD.

Cambiar entre el modo GRABAR y el modo REPRODUCIR

En el modo Grabación:
Pulse el botón ▶ (❶) para cambiar al modo Reproducción.

En el modo Reproducción:
Pulse el botón **MODE** (❷)o el botón ▶ (❶) para cambiar al modo de Grabación anterior.

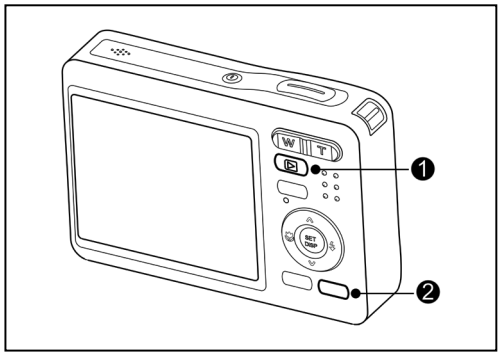

Downloaded from www.vandenborre.be - Free manuals search engine

Seleccionar el modo GRABAR

1 **Coloque la cámara en modo Grabación.**

2 **Inicie la paleta de modo.**
- Pulse el botón **MODE** (❷) para mostrara la pantalla del Modo Escena.

3 **Seleccionar un modo.**
- Control de cuatro direcciones para seleccionar un modo de escena deseado y después pulse el botón **SET** para confirmar la configuración.

Uso de los menús

Cuando se muestra un menú, control de cuatro direcciones y el botón **SET** para realizar los cambios deseados.

Menú de Grabación

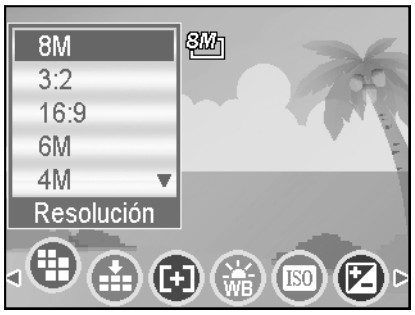

1 **Encienda la cámara y establezca el modo GRABAR.**

2 **Abra el menú REC (GRABAR).**
- Pulse el botón **MENU** para mostrar el menú.

3 **Seleccione un elemento.**
- Pulse ◄ o ► para seleccionar un elemento de menú.

4 **Cambie la configuración.**
- Pulse ▲ o ▼ para cambiar el parámetro.

5 **Pulse el botón MENU o SET para guardar las modificaciones y cierre el menú.**

QuickStartGuide_8325.indd 18 20.03.2008 12:55:02 Uhr
Downloaded from www.vandenborre.be - Digital Photography manuals search engine

Menú de Configuración

1 **Encienda la cámara y establezca el modo GRABAR o REPRODUCIR.**

2 **Presione el botón MENÚ para abrir el menú REC (GRABAR) o PLAY (REPRODUCIR).**

- El menú mostrado dependerá de si se encuentra en el modo Grabación o Reproducción.

3 **Abra el menú Setup (Configuración).**

- Pulse el control de cuatro direcciones para seleccionar **Conf.** (🔧) y después pulse el botón **SET** para mostrar el menú Setup.

4 **Seleccione un elemento.**

- Pulse ▲ o ▼ para seleccionar un elemento de menú y después pulse el botón **SET** para mostrar el submenú.

5 **Cambie la configuración.**

- Pulse ▲ o ▼ para seleccionar una opción, y después ◄ o el botón **SET** para aplicar las modificaciones.

6 **Pulse el botón MENU para cerrar el menú.**

- Si el sistema operativo es Windows 98/98SE, haga clic con el botón secundario del ratón en el archivo de programa denominado „DSC driver" (Controlador DSC) o „DSC User manual" (Manual del usuario DSC) que se encuentra en el CD-ROM.

Downloaded from www.vandenborre.be - Manuals search engine

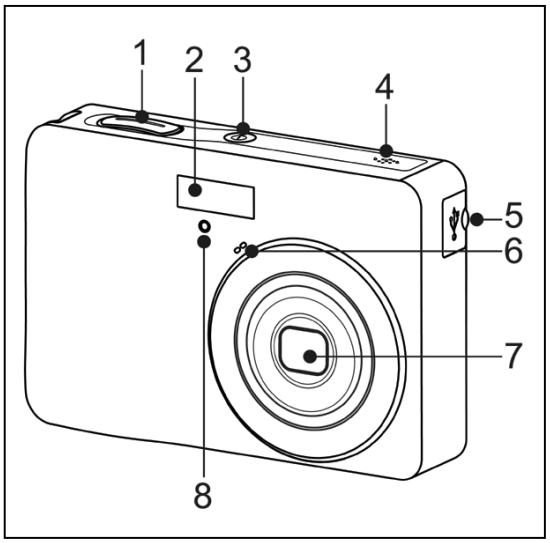

1. Pulsante otturatore
2. Flash
3. Pulsante di accensione
4. Altoparlante
5. Porta USB / Morsetto uscita video
6. Microfono
7. Obiettivo
8. Luce autoscatto

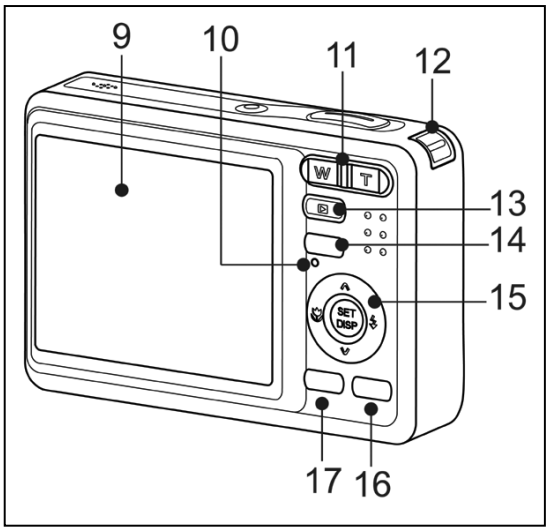

9. Schermo LCD
10. Spia di funzionamento
11. Pulsante di zoom
12. Montaggio cinghia
13. Modo riproduzione
14. Pulsante MENU
15. Tasto multifunzione 5 direzioni:
    - Pulsante Flash
    - Pulsante Macro
    - Pulsante SET/DISP
16. Pulsante modalità fotocamera
17. Cancella

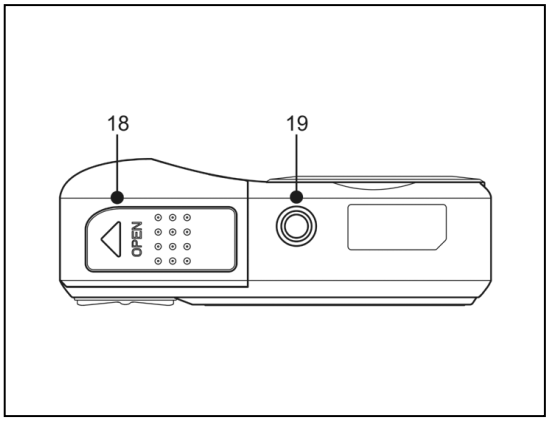

18. Coperchio batterie
    - Lo slot della scheda di memoria e posizionato sotto il coperchio delle batterie, adiacente al vano batterie.
19. Attacco treppiede

Download from Www.Somanuals.com. All manuals search engine

Inserimento delle batterie

1 **Aprire il coperchio del vano batterie.**

- Aprire il coperchio dello scomparto batterie facendolo scorrere nella direzione indicata dalla freccia.

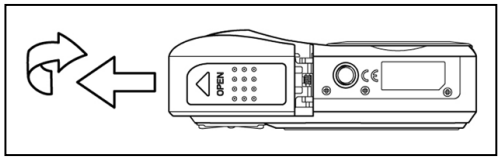

2 **Inserire le batterie.**

- Inserire le due batterie alcaline di tipo AA con le polarita in corrispondenza dei contrassegni all'i nterno del coperchio delle batterie.

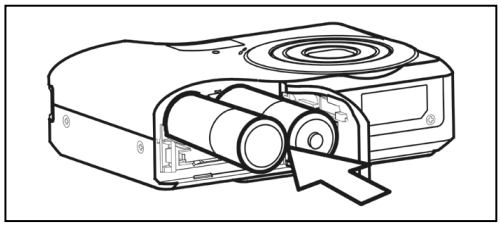

3 **Richiudere il coperchio del vano batterie.**

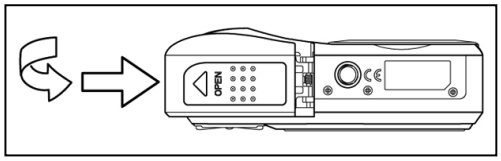

Cambiare la modalità

In modalità REC (Registrazione) si possono registrare immagini ed audio. Con la modalità PLAY (Esecuzione) si possono riprodurre, eliminare o modificare le immagini sul display LCD.

Commutazione tra registrazione e riproduzione

In modalita Registrazione:
Premere il tasto ▶ (❶) per passare alla modalità Riproduzione.

In modalita Riproduzione:
Premere il tasto ▶ (❶) o **MODALITÀ** (❷) per passare alla modalità Registrazione usata precedentemente.

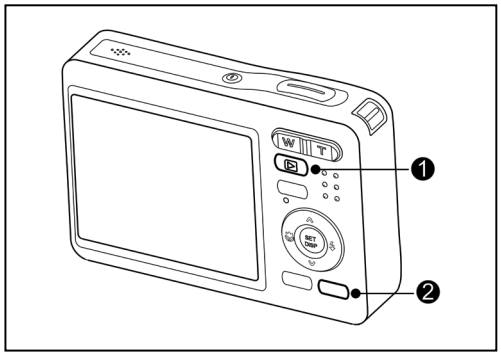

QuickStartGuide_8325.indd 21 20.03.2008 12:55:05 Uhr
Downloaded from www.vandenborre.be - Manuals search engine

Selezionare la modalità REC (Registrazione)

1 **Impostare la fotocamera sulla modalità Registrazione.**

2 **Avviare il menu della modalità.**
- Premere il tasto **MODALITÀ** (❷) per mostrare la schermata della modalità Scene.

3 **Selezionare la modalità.**

* Usare il tasto freccia per selezionare la modalità Scene desiderata e premere il tasto **SET** per confermare l'impostazione.

Uso dei menu

Quando e visualizzata la schermata di un menu, il tasto freccia e il tasto **SET** possono essere utilizzati per effettuare le impostazioni desidera te.

Menu Registra

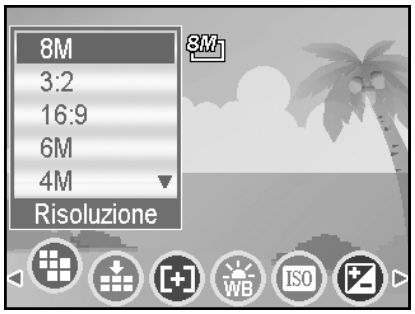

1 **Accendere la fotocamera ed impostarla in modalità REC (Registrazione).**

2 **Aprire il menu REC (Registrazione).**
- Premere il tasto **MENU** per visualizzare il menu.

3 **Selezionare una voce.**
- Premere ◄ o ► per selezionare una voce del menu.

4 **Cambiare le impostazioni.**
- Premere ▲ o ▼ per modificare l'impostazione.

5 **Premere il tasto MENU o SET per salvare le impostazioni e chiudere il menu.**

QuickStartGuide_8325.indd 22 20.03.2008 12:55:06 Uhr
Download from Www.Somanuals.com. All Manuals search engine

Menu Impostaz

1 **Accendere la fotocamera ed impostarla in modalità REC (Registrazione) o PLAY (Esecuzione).**

2 **Premere il tasto MENU per aprire il menu REC (Registrazione) o PLAY (Esecuzione).**

- La visualizzazione del menu dipende dalla modalità impostata (Registrazione o Riproduzione).

3 **Aprire il menu Setup (Impostazioni).**

- Premere il tasto a quattro funzioni per selezionare **SETUP** (Impostazioni) (), e poi premere il tasto **SET** (Imposta) per visualizzare il menu Setup (Impostazioni).

4 **Selezionare una voce.**

- Premere ▲ o ▼ per selezionare una voce del menu, quindi premere ► o il tasto **SET** per aprire il sottomenu.

5 **Cambiare le impostazioni.**

- Premere ▲ o ▼ per selezionare un'opzione e premere ◄ o il tasto **SET** per applicare l'impostazione.

6 **Premere il tasto MENU per chiudere il menu.**

- Quando il sistema operativo è Windows 98/98SE, fare clic col tasto destro del mouse sul file con nome „DSC driver" o „DSC User manual" del CD-ROM.

Downloaded from www.vandenborre.be - Manuals search engine

Rollei

RCP-Technik GmbH & Co. KG
Tarpen 40/Gebäude 6b
D-22419 Hamburg
Hotline +49 (0)6 31/3 42 84 49
welcome@rcp-technik.com
www.rcp-technik.com

Subject to technical changes!

Download from Www.Somanuals.com. All manuals search engine